




**User Manual**  
for the  
**High-Speed Serial I/O Adapter**  
**VxWorks Software Driver**

<b>C<sup>2</sup>I<sup>2</sup> Systems Document No.</b>	CCII/HSS/6-MAN/002
<b>Document Issue</b>	4.2
<b>Issue Date</b>	2009-09-03
<b>Print Date</b>	2009-09-04
<b>File Name</b>	P:\HSS\TECH\MAN\CHSMAN02.WPD
<b>Distribution List No.</b>	

© C<sup>2</sup>I<sup>2</sup> Systems The copyright of this document is the property of C<sup>2</sup>I<sup>2</sup> Systems. The document is issued for the sole purpose for which it is supplied, on the express terms that it may not be copied in whole or part, used by or disclosed to others except as authorised in writing by C<sup>2</sup>I<sup>2</sup> Systems.

## Signature Sheet

Name	Signature	Date
Completed by  X Keuger	 Project Engineer Board Level Products C2I2 Systems	2009-09-03
Accepted by  Ed. DE WMA	 Project Manager Board Level Products C2I2 Systems	2009-09-03
Accepted by  X. Keuger	 Quality Assurance C2I2 Systems	2009-09-03

## Signature Sheet

Name	Signature	Date
Completed by		
	Project Engineer Board Level Products C <sup>2</sup> I <sup>2</sup> Systems	
Accepted by		
	Project Manager Board Level Products C <sup>2</sup> I <sup>2</sup> Systems	
Accepted by		
	Quality Assurance C <sup>2</sup> I <sup>2</sup> Systems	

## Amendment History

Issue	Description	Date	ECP No.
1.0	Initial version created by splitting cManSioDrv.wpd, Issue 1.1 into separate SIO and HSS user manuals.	2000-03-16	-
1.1	Updated Application Program Interface (API) to correspond with version 1 release 0 of the host driver.	2000-05-23	-
2.0	Updated for HSS version 2.0.	2000-06-06	-
2.1	Updated the detailing protocol structures and setup options.	2000-10-31	-
2.3	Updated driver data structures to include DPLL and various encoding methods.	2001-01-19	-
2.4	Added version display function for driver and firmware software. Updated UART and HDLC descriptions. Added clock detection function.	2001-03-19	-
2.5	Added functionality to attach external clocks. Added SMC channels.	2001-04-23	-
2.6	Implemented the BISYNC protocol. Included the BIT functions descriptions. Added configuration specifics for the X86.	2001-05-21	-
2.6.1	Added HSS Frontpanel functionality.	2001-06-15	-
2.6.2	Changed flash programming.	2001-07-05	-
3.0	General update of driver.	2001-09-13	-
3.1	Updated description of include-files.	2001-09-25	-
3.2	HSS Serial I/O back and Frontpanel Adapters share the same protocol information structure now. Updated description of protocol information structure.	2001-10-01	-
3.3	Added new hssOpen_port_fp() function, which allows for floating point initialisation of send, receive and clock tasks.	2001-10-12	-
3.4	Added new hssCreate_device_ex() function, which allows the user to specify the RX and TX buffer size for each channel.	2002-01-17	-
3.5	Updated Call-back function description : added CRC error and TX done error reporting. Updated BIT structure : added oscillator frequency variable.	2002-04-11	-
3.5.4	Changed format of document according to latest company template. Update to BIT structure. Added description for Low Latency (Polled Mode) driver. Added description for High-Speed Mode for Serial Channel A.	2003-03-25	CCII/HSS/6-ECP/002
4.0	Added POST descriptions.	2003-08-27	CCII/HSS/6-ECP/009
4.1	Updated title of document.	2009-05-27	CCII/BLPGEN/6-ECP/015
4.2	Improve document naming consistency.	2009-09-03	CCII/HSS/6-ECP/018

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page iii of vi

# Contents

<b>1. Scope</b>	<b>1</b>
1.1 Identification	1
1.2 Introduction	1
<b>2. Applicable and Reference Documents</b>	<b>3</b>
2.1 Applicable Documents	3
2.2 Reference Documents	3
<b>3. Installation Procedure</b>	<b>4</b>
3.1 To Build the HSS VxWorks Software Driver into the VxWorks Kernel	4
3.1.1 Tornado 1.0.1 Environment	4
3.1.2 Tornado 2.0 Environment	4
3.2 To Load the Driver Software Separately	4
3.3 Using the HSS VxWorks Software Driver	5
3.3.1 Overview of the HSS VxWorks Software Driver	5
3.3.2 Creating the Device	7
3.3.3 Configuring the Ports	7
3.3.4 Adding Receive Buffers	7
3.3.5 Adding Call-back Functions	8
3.3.6 Sending and Receiving Data	9
3.3.7 Destroying the Device	9
3.3.8 Detecting an Active Clock Signal on Ports	9
3.3.9 Obtaining the Current Host and Firmware Version Number	10
3.3.10 HSS Built-In Tests (BITs)	10
3.3.11 Low Latency (Polled Mode) Setting	10
3.3.12 High-Speed Mode Setting for Port A	11
3.3.13 HSS Power-On-Self Tests	12
<b>4. Application Program Interface (API)</b>	<b>13</b>
4.1 HSS VxWorks Software Driver Interface	13
4.1.1 Create Device	14
4.1.2 Destroy Device	16
4.1.3 Port Exists?	17
4.1.4 Set Port Configuration	18
4.1.5 Get Port Configuration	19
4.1.6 Open Port	20
4.1.7 Close Port	22
4.1.8 Send Data	23
4.1.9 Add Receive Buffer	24
4.1.10 Remove Receive Buffer	25
4.1.11 Add Call-back	26
4.1.12 Remove Call-back	27
4.1.13 Detecting an active clock signal on ports	28
4.1.14 Print out current version number	29
4.1.15 HSS BIT	30
4.1.16 Polled Mode Setting	32
4.1.17 High-Speed Mode Setting	33
4.1.18 Enable / Disable POST	34
4.1.19 Return POST Status	35
4.2 Driver Data Structures	36
4.2.1 UART Mode	37
4.2.1.1 UART Protocol Information Structure	37
4.2.1.2 UART Protocol Information Structure Members	38
4.2.2 HDLC Mode	41

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page iv of vi

4.2.2.1	HDLC Protocol Information Structure .....	41
4.2.2.2	HDLC Protocol Information Structure Members .....	42
4.2.2.3	Preamble Requirements .....	44
4.2.3	BISYNC Mode .....	45
4.2.3.1	BISYNC Protocol Information Structure .....	45
4.2.3.2	BISYNC Protocol Information Structure Members .....	46
4.2.4	SMC UART Mode .....	49
4.2.4.1	SMC UART Protocol Information Structure .....	49
4.2.4.2	SMC UART Protocol Information Structure Members .....	50
<b>5.</b>	<b>Getting Started .....</b>	<b>52</b>
<b>6.</b>	<b>Contact Details .....</b>	<b>53</b>
6.1	Contact Person .....	53
6.2	Physical Address .....	53
6.3	Postal Address .....	53
6.4	Voice and Electronic Contacts .....	53
6.5	Product Support .....	53
<b>Annexure A</b>	<b>.....</b>	<b>54</b>
Making Changes to sysLib.c for X86	.....	54

## Abbreviations and Acronyms

API	Application Program Interface
BIT	Built-in Test
bit/s	bits per second
BRG	Baud Rate Generator
BSD	Berkeley Socket Devices
BSP	Board Support Package
CRC	Cyclic Redundancy Check
DPLL	Digital Phase-Locked Loop
EEPROM	Electrically Erasable Programmable Read Only Memory
FTP	File Transfer Protocol
HCC	Host Carrier Card
HSS	High-Speed Serial
I/O	Input / Output
PC	Personal Computer
PCI	Peripheral Component Interconnect
PMC	Peripheral Component Interconnect Mezzanine Card
POST	Power-On-Self Test
RX	Receive
SBC	Single Board Computer
SCC	Serial Communications Controller
SIO	Serial Input / Output
SMC	Serial Management Controller
TX	Transmit
VME	Versa Module Eurocard

# 1. Scope

## 1.1 Identification

This document is the User Manual for the C<sup>2</sup>I<sup>2</sup> Systems Peripheral Component Interconnect (PCI) Mezzanine Card (PMC) High-Speed Serial (HSS) VxWorks Software Driver. This document refers to the HSS VxWorks Software Driver version 3.5.4 or later.

## 1.2 Introduction

The HSS VxWorks Software Driver is a low level, device-dependant, interface for transferring data over a C<sup>2</sup>I<sup>2</sup> Systems HSS Input / Output (I/O) Adapter. The driver binaries are provided with explicit installation instructions.

The driver software distribution consists of (at least) the following files :

ccHssLib[4|8]vx.y.z.<host> or  
ccHssLib[4|8]vx.y.z.\_mlongcall.<host>

Host-architecture specific, driver object file :

*cc* - CCII Systems (Pty) Ltd  
*HssLib* - HSS VxWorks Software Driver  
*[4|8]* - 4 port or 8 port HSS I/O Adapter  
*x* - Version number  
*y* - Revision number  
*z* - Beta number  
*<host>* - Host for which the binary is built :

- x86
- dmv179 (for Dy4 PPC SVME/DMV 178/179 and for SVME/DMV 181 from version 4.0 onwards)

*mlongcall* - driver compiled with -mlongcall flag (only for Dy4 PPC host)

e.g. "ccHss4v2.4.dmv179" for version 2.4 of the HSS software, built for a Dy4 SVME/DMV 178/179 PowerPC host for a 4 port HSS I/O Adapter.

ccHss4vx.y.z.firmware.zip containing :

HSS firmware :

ccHss4vx.y.z -<freq>.hex  
BP22\_Boards\_only\ccHss4vx.y.z -<freq>.hex

*<freq>* - corresponding oscillator frequency  
*BP22\_Boards\_only* is a subdirectory containing the HSS firmware for CCII/SIO/PMC/4P/BP/XX/22 adapters only, where XX = [CC|COM].

ccHssFlashvx.y.z.<host> or  
ccHssFlashvx.y.z.\_mlongcall.<host>

Flash update driver.

hssReadme.txt

General information and installation notes.

hssRelease\_emb.txt, hssRelease\_host.txt

Release notes and revision history :

Please check this file for information on the latest updates.

ccHss4vx.y.z.h\_files.zip

Zip file which contains all header files that define the application program interface (API) to the driver.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 1 of 54



ccHssTest.c and  
ccHssTest.<host> or  
ccHssTest\_mlongcall.<host>

ccHssPolledMode.zip containing :

ccHssTestPMLoopback.c  
ccHssTestPMSingleChan1.c  
ccHssTestPMSingleChan2.c  
ccHssTestPMMissedFrame.c  
Makefile.dmv179  
Makefile.x86

hssChanges.txt

hssFlash.txt

hssTest.txt

Sample C code for accessing the HSS VxWorks Software Driver.

Sample polled mode code with Makefiles for relevant platforms.

Note : This file is only included with HSS version 3.5.4.

Changes to be made to VxWorks and BSP files.

Procedure for updating the firmware if required.

Test procedure for verifying host driver and firmware.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 2 of 54

2. **Applicable and Reference Documents**

2.1 Applicable Documents

2.1.1 DI-IPSC-81443, *Data Item Description for a Software User Manual*.

2.1.2 VxWorks 5.3.1, *Programmers Guide*, edition 1.

2.1.3 *MPC8260 PowerQUICC II Family Reference Manual, MPC8260UM/D*, rev. 1, dated May 2003.

2.2 Reference Documents

None.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 3 of 54

### 3. **Installation Procedure**

This paragraph describes the installation procedure for the HSS VxWorks Software Driver. (The examples given are for a Dy4 DMV179 PowerPC host.)

#### 3.1 To Build the HSS VxWorks Software Driver into the VxWorks Kernel

Assume the BSP directory is given as : BSP\_DIR = /tornado/target/config/dmv179.

##### 3.1.1 Tornado 1.0.1 Environment

- Copy ccHss4vx.y.z.dmv179 to your \$(BSP\_DIR)/lib directory as ccHss4.a.
- Edit the Makefile in the BSP directory :
  - Use hssChanges.txt to copy and paste the relevant information.
  - Add the following macro (or edit the existing one) :

```
EXTRA_MODULES = $(BSP_DIR)/lib/ccHss4.a.
```

- Rebuild all VxWorks images.

##### 3.1.2 Tornado 2.0 Environment

- Copy ccHss4vx.y.z.dmv179 to your \$(BSP\_DIR)/lib directory as ccHss4.a.
- In the Builds section of the Project Workspace, change the Kernel properties to include the ccHss4.a library file in the Macros LIBs option.
- Rebuild all VxWorks images.

#### 3.2 To Load the Driver Software Separately

Note : This step is not required if the HSS VxWorks Software Driver was built into the BSP.

If the driver is not built into the BSP, a user can load it separately :

- Copy ccHss4vx.y.z.dmv179 to your present working directory as ccHss4.a.
- From the VxWorks shell type :
  - ld < ccHss4.a.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 4 of 54

3.3 Using the HSS VxWorks Software Driver

3.3.1 Overview of the HSS VxWorks Software Driver

The HSS VxWorks Software Driver is able to operate in three different modes :

- Normal (Interrupt) Mode : A Call-back function is called by the driver in the case of an event (packet received, transmitted or a clock detected).
- Polled Mode : The disadvantage of calling a Call-back function in respect of the receive channel is that the latency, measured from the actual end of the packet on the data line to the receive Call-back being called, is approximately 175  $\mu$ s. For some applications the 175  $\mu$ s might be excessive, and therefore a polled mode setting has been implemented for each port, which reduces the receive latency to less than 50  $\mu$ s. See Paragraph 3.3.11 for more details.
- High-Speed Mode : Only Port A is enabled and this mode is only supported on a HSS Adapter with a 100 MHz MPC862 processor. See Figure 1 and Paragraph 3.3.12 for more details.

The following diagram indicates the criteria for selecting between normal and High-Speed Mode :

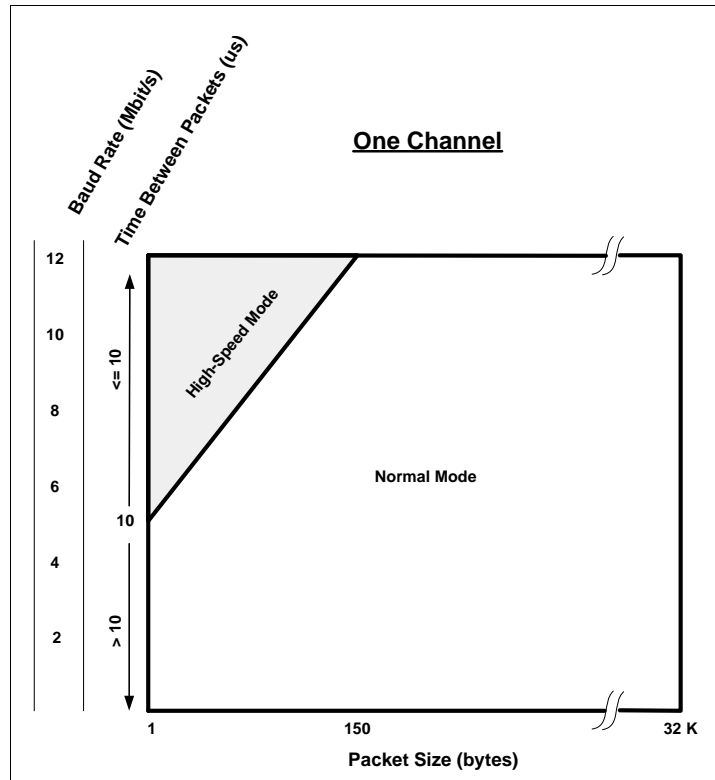


Figure 1 : Normal / High-Speed Mode Selection

The following flow chart shows the functions involved in each mode :

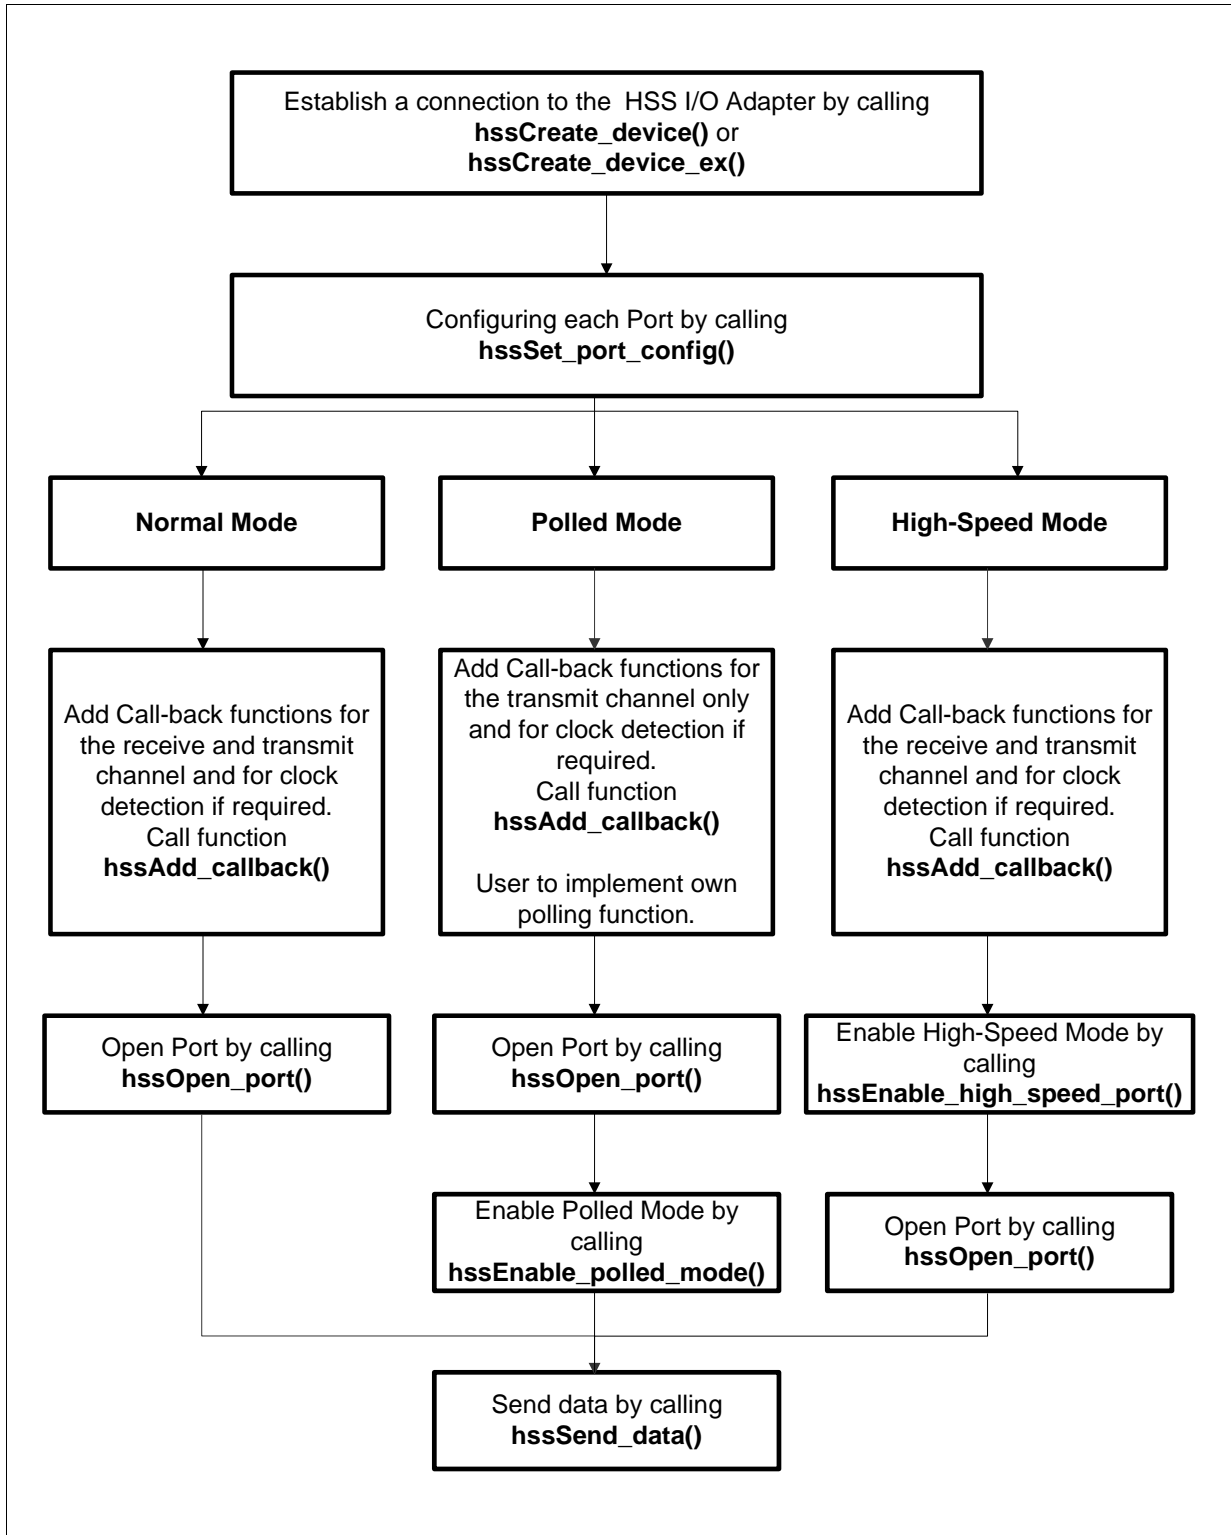


Figure 2 : Overview of HSS VxWorks Software Driver

### 3.3.2 Creating the Device

The HSS VxWorks Software Driver supports multiple HSS I/O Adapter on a single host. To establish a connection and construct all the device specific structures, a user must create each of the devices separately, using the device ID to identify it.

The device ID starts at 0 and increments by 1 for each of the devices. Device 0 refers to the device in the lowest PMC slot. The HSS VxWorks Software Driver can not be used until the user has created the device.

Example : For device 0 :

```
/* Create all HSS devices */
hssCreate_device(0);
```

The device ID is used in all calls to the HSS VxWorks Software Driver to identify the correct device.

### 3.3.3 Configuring the Ports

The HSS I/O Adapter has four Serial Communications Controllers (SCCs) [Ports A - D] that support UART and HDLC/SDLC protocols, and two Serial Management Controllers (SMCs) [Ports I and J] that support only asynchronous UART.

After the HSS device has been created, the user must first set the default configuration for each of the ports. To set the configuration of a port, a protocol-specific information structure is used. Examples of the required structure is given in cchssTest.c (for the UART protocol) and can be used as a starting point.

The structures allow the user to set all the protocol-specific options available on the HSS I/O Adapter communication controller chip (the MPC860 PowerQUICC™). For available options for each of the structure fields, see [2.1.3].

Example : Set two SCC ports to UART mode and two to HDLC mode :

```
/* Set initial SCC port configuration */
hssSet_port_config(0, HSS_PORT_A, &uart_info);
hssSet_port_config(0, HSS_PORT_B, &uart_info);
hssSet_port_config(0, HSS_PORT_C, &hdlc_info);
hssSet_port_config(0, HSS_PORT_D, &hdlc_info);

/* Set initial SMC port configuration */
hssSet_port_config(0, HSS_PORT_I, &smc_uart_info);
hssSet_port_config(0, HSS_PORT_J, &smc_uart_info);
```

### 3.3.4 Adding Receive Buffers

Note : This step is not necessary anymore. Receive buffers are added automatically by the driver in the hssOpen\_port() function. It is still possible to call hssAdd\_receive\_buffer(), but this function will not do anything.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 7 of 54

### 3.3.5 Adding Call-back Functions

The HSS VxWorks Software Driver notifies the user of different events by calling a user defined Call-back function. The events for which the user may specify one or more Call-back functions are :

- Send Begin - The driver has accepted the data for sending.
- Send Done - The driver has finished sending the data.
- Receive Done - Data has been received and written into the user's buffer.
- Clock Detect - A clock signal has been detected on that specific port.

Only one Call-back function for each event is recommended. For the user to receive data, at least the Receive Done Call-back must be installed. While the Receive Done Call-back is executed, the corresponding buffer will not be accessed by the HSS VxWorks Software Driver. The user can process the data in the Call-back function or copy the data somewhere else for processing at the user's leisure.

#### **Receive function prototype :**

```
void Process_rx_data(int devid, int portid, int crc_error, int userid, int length, void *pdata);
```

#### **Transmit Begin prototype :**

```
void Process_tx_data(int devid, int portid, int dummy, int userid, int length, void *pdata);
```

#### **Transmit Done prototype :**

```
void Process_tx_data(int devid, int portid, int error, int userid, int length, void *pdata);
```

#### **Clock Detection prototype :**

```
void Process_clk_detect(int devid, int portid, int dummy1, int userid, int dummy2, void *dummy3);
```

devid	= Device ID.
portid	= port ID.
crc_error	= HSS_OK (no CRC error). = HSS_ERROR (CRC error).
error	= HSS_OK (send done OK). = HSS_ERROR (buffer underrun or CTS lost : send not complete).
userid	= User defined ID.
length	= Length of received data.
pdata	= Buffer with received data.
dummy1/2	= Variables not used (always 0).
dummy3	= Variable not used (always NULL).

Example : Add a Call-back function for handling receives :

```
/* Receive function prototype - this function is implemented by the user */  
void Process_rx_data(int devid, int portid, int crc_error, int userid, int length, void *pdata);  
  
/* Add receive Call-back */  
hssAdd_callback(0, HSS_CB_ON_RECEIVE_DONE, Process_rx_data, 0);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 8 of 54

### 3.3.6 Sending and Receiving Data

To send and receive data on a specified port, the user must first open the port. To stop sending or receiving data from a port, the user must close the port.

Example : Send some data on device 0, port B :

```
/* Open port for sending data */
hssOpen_port(0, HSS_PORT_B, 50);

/* Send some data */
hssSend_data(0, HSS_PORT_B, 0, 256, pBuffer256, NO_WAIT);

/* Do other stuff */
/* */

/* Close Port After final usage */
hssClose_port(0, HSS_PORT_B);
```

### 3.3.7 Destroying the Device

When the device is no longer required it should be destroyed to free system resources.

Example : Device 0 is no longer required :

```
/* Close ports after final usage */
hssClose_port(0, HSS_PORT_A);
hssClose_port(0, HSS_PORT_B);
hssClose_port(0, HSS_PORT_C);
hssClose_port(0, HSS_PORT_D);
hssClose_port(0, HSS_PORT_I);
hssClose_port(0, HSS_PORT_J);

/* Destroy device to free resources */
hssDestroy_device(0);
```

### 3.3.8 Detecting an Active Clock Signal on Ports

To detect when a port's clock signal becomes active, use the following function :

Example : Detecting a clock signal on device 0 and Port A :

```
/* Enable port to detect clock */
hssClock_detect(0, HSS_PORT_A);
```

A Call-back function gets called once a clock has been detected. After this Call-back function has been serviced, the user can re-initialise the clock detection routine as shown above.

```
/* Clock detection prototype - this function is implemented by the user */
void Process_clk_event(int devid, int portid, int dummy1, int userid, int
dummy2, void *dummy3);

/* adding clock_detect Call-back */
hssAdd_callback (0, HSS_CB_ON_CLOCK_DETECT, Process_clk_detect, 0);
```

Note : The last two variables of the clock detection prototype function are dummy variables and are not initialised.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 9 of 54



### 3.3.9 Obtaining the Current Host and Firmware Version Number

The following function prints out the current version number of the driver and firmware software :

```
/* Print current version number */
hssVersion_print(0);
```

Note : Run hssCreate\_device(0) first.

The following function returns the firmware version stored in the Electrically Erasable Programmable Read Only Memory (EEPROM) :

```
/* Return firmware version number : version*100 + revision*10 + beta */
hssFirmware_version(0, &version);
```

Note : This function may be called without running hssCreate\_device(0) first.

### 3.3.10 HSS Built-In Tests (BITs)

The following function displays each port's statistics : e.g. how many bytes / packets have been accepted / rejected / sent / received and how many errors were reported.

Example : Displaying each port's statistics for device 0 :

```
hssBit_report(0);
```

To clear the counters of the hssBit\_report(0) function, use the function hssBit\_clear(0).

Note : Instead of displaying each port's statistics, the function hssBit\_getstruct(..) only returns the corresponding statistics in a structure. See Paragraph 4.1.15.

### 3.3.11 Low Latency (Polled Mode) Setting

Note : This function is only available in HSS version 3.5.4.

The following function sets up a specific port to polled mode, and returns a pointer to 4 receive buffers :

Example : Enabling polled mode on device 0 and Port A :

```
hssEnable_polled_mode(0, HSS_PORT_A, pointer_to_buffer);
```

The format of the four receive buffers depends on the size of the RX and TX buffers (see Paragraph 4.1.1), with eight bytes appended at the end of each buffer. The structure of the eight bytes is as follows :

Byte Number appended at End of Receive Buffer	Description
Byte 1 - 4	Contains the length of the packet received.
Byte 5	Reserved.
Byte 6	Only used in HDLC : returns the HDLC receive error status :  <i>HSS_OK</i> - packet received OK. <i>HSS_HDLC_RX_CRC_ERROR</i> - set when a frame contains a CRC error. <i>HSS_HDLC_RX_NONOCTET_ALIGNED_FRAME</i> - set when a received frame contains a number of bits not divisible by eight. <i>HSS_HDLC_RX_ABORT_SEQUENCE</i> - set when at least seven consecutive ones are received during frame reception.

Byte 7	Counter variable indicating the number of frames not serviced in time by the user. The data will be lost (overwritten by the new data) in the process.
Byte 8	Receive Buffer Status Byte. One of :  <i>HSS_RX_BUFFER_EMPTY</i> - The buffer is empty. <i>HSS_RX_BUFFER_FULL</i> - A packet has been received and data is valid. <i>HSS_RX_BUFFER_HANDLED</i> - The user must set the receive buffer status byte to this flag, indicating to the HSS Adapter that this buffer has been handled.

The user should set up a task to search through the four receive buffers and poll Byte 8. If the buffer is marked as full, the length variable (Bytes 1 - 4) will be valid and data can be copied from the buffer. Once the buffer has been handled, the user must set Byte 8 accordingly.

Note : Before reading anything from the buffer, the user should invalidate the cache (vxWorks function `cacheInvalidate`). After setting Byte 8 to handled, the user should flush the cache (vxWorks function `cacheFlush`). Only flush and invalidate the number of bytes needed, not the whole receive buffer.

### 3.3.12 High-Speed Mode Setting for Port A

The following function sets up Port A to High-Speed Mode and disables all other ports :

Example : Enabling High-Speed Mode on device 0 and Port A :

```
hssEnable_high_speed_port(0);
```

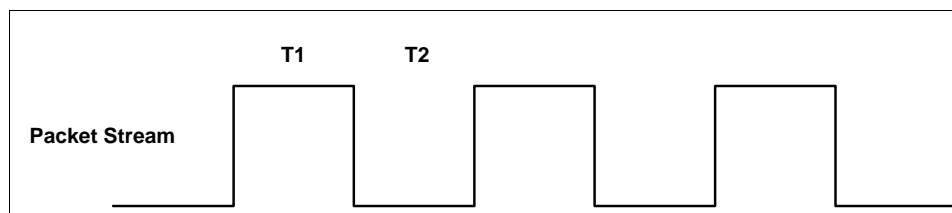


Figure 3 : Receive Packet Stream

This function should be used when the following criteria have to be met (with reference to Figure 1 and Figure 3) :

- a receive baud rate of 5 Mbits/second or greater and
- the time (T1) of 1 packet is less or equal to 100  $\mu$ s and
- the time (T2) between packets is less or equal to 10  $\mu$ s.

The following table illustrates the number of bytes per packets that can be received in 100  $\mu$ s for various baud rates (values derived from the following equation : **Bytes = [100  $\mu$ s \* baud rate] / 8-bits**) :

Baud Rate (in Mbits/second)	Number of Bytes per Packet (for T1 = 100 $\mu$ s)
5	62.5
8	100
10	125

Note : This function is only supported on a HSS Adapter with a 100 MHz MPC862 processor.

### 3.3.13 HSS Power-On-Self Tests

The Power-On-Self Tests (POSTs) are available from HSS version 4.2 onwards. The tests are disabled by default, but can be selectively enabled. The following tests are defined :

- Magic number checking - Checks the start of the flash for correct magic number. This test is always performed and cannot be disabled.
- Flash CRC - Checks that the checksum of the kernel in flash is correct. This test is disabled by default.
- EEPROM verification - Verifies the contents of the EEPROM. If the contents is corrupt, the EEPROM is reprogrammed. This test is always performed.
- RAM databus test - Checks the databus connected to the RAM for any errors. This test is disabled by default.
- RAM addressbus test - Checks the addressbus connected to the RAM for any errors. This test is disabled by default.
- RAM device test - Checks the whole RAM device for any errors. This test is disabled by default.

If any of the above tests fail, an error code is flashed on the LEDs D3 and D4 and the adapter will not boot up further. If the adapter is reset and the adapter still does not boot up, contact C<sup>2</sup>I<sup>2</sup> Systems.

The error codes are continuously flashed on the LEDs D3 and D4, followed by a short break. The number of flashes are defined as follows (see also header file hssPost.h) :

- HSS\_EEPROM\_UPDATE - 1 flash
- HSS\_RAM\_DATA\_ERROR - 2 flashes
- HSS\_RAM\_ADDR\_ERROR - 3 flashes
- HSS\_RAM\_DEVICE\_ERROR - 4 flashes
- HSS\_FLASH\_MAGIC\_ERROR - 5 flashes
- HSS\_FLASH\_KERNEL\_CRC\_ERROR - 6 flashes
- HSS\_EEPROM\_ERROR - 7 flashes

The above codes are also written to the EEPROM and may be read back with the following function :

Example : Obtain POST error status on device 0 :

```
hssPost_status(0, and data)
```

To enable / disable selected tests, the following function may be used :

Example : Enable all RAM tests but disable Flash CRC checking on device 0 :

```
hssPost_enable(0, HSS_POST_RAM_DATA_ENABLE | HSS_POST_RAM_ADDR_ENABLE |  
HSS_POST_RAM_DEV_ENABLE);
```

Note : The function hssCreate\_device() will return HSS\_POWER\_ON\_SELFTEST\_FAIL if any of the tests fail. The function hssPost\_status() may then be used to determine which one of the tests has failed.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 12 of 54

#### 4. **Application Program Interface (API)**

##### 4.1 HSS VxWorks Software Driver Interface

The zip file ccHss4vx.y.z.h\_files.zip contains the following header files :

- crc.h - Used for crc algorithm
- hssDefs.h
- hssHostDriver.h
- hssControllfc.h
- hssPost.h - POST header included from HSS version 4.2

The following files should always be included :

- hssDefs.h
- hssHostDriver.h
- hssControllfc.h

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 13 of 54

#### 4.1.1 Create Device

Function : **hssCreate\_device**

Purpose : Create and initialise the HSS device specific structures.

Arguments :

<dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.

Returns :

HSS\_OK - On success.  
HSS\_INVALID\_PARAM - Invalid dev\_id supplied.  
HSS\_PCI\_INIT\_FAIL - PCI initialisation failed.  
HSS\_MEM\_ALLOC\_FAILED - If HSS device structure could not be created in memory.  
HSS\_DEVICE\_NOT\_FOUND - If HSS device <dev\_id> was not found on the PCI bus.  
HSS\_MEM\_INVALID\_ADDRESS - If the HSS device PCI address was not valid.  
HSS\_MEM\_EEPROM\_BUSY - If HSS device could not read version number from EEPROM.  
HSS\_POWER\_ON\_SELFTEST\_FAIL - If the POST failed.

```
hssStatus hssCreate_device(hssDeviceId dev_id);
```

Function : **hssCreate\_device\_ex**

Purpose : Create and initialize the HSS device specific structures. This extended version allows the user to specify the maximum RX and TX buffer size for each port.

Arguments :

<dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.  
<scc\_#\_size> - Maximum RX and TX buffer size for specific scc port.  
<smc\_#\_size> - Maximum RX and TX buffer size for specific smc port. (Valid arguments : HSS\_2K, HSS\_4K, HSS\_8K, HSS\_16K, HSS\_32K).  
<reserved1&2> - Two reserved variables for future use.

Returns :

HSS\_OK - On success.  
HSS\_INVALID\_PARAM - Invalid parameters supplied.  
HSS\_PCI\_INIT\_FAIL - PCI initialisation failed.  
HSS\_MEM\_ALLOC\_FAILED - If HSS device structure could not be created in memory.  
HSS\_DEVICE\_NOT\_FOUND - If HSS device <dev\_id> was not found on the PCI bus.  
HSS\_MEM\_INVALID\_ADDRESS - If the HSS device PCI address was not valid.  
HSS\_MEM\_EEPROM\_BUSY - If HSS device could not read version number from EEPROM.  
HSS\_POWER\_ON\_SELFTEST\_FAIL - If the POST failed.

```
hssStatus hssCreate_device_ex(hssDeviceId dev_id, unsigned int scc_0_size, unsigned int scc_1_size, unsigned int scc_2_size, unsigned int scc_3_size, unsigned int smc_0_size, unsigned int smc_1_size, unsigned int reserved1, unsigned int reserved2);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 14 of 54

Note : One of these two functions has to be called (once per device) before any other function call to the specified device will be valid. The function `hssCreate_device()` sets up the RX and TX buffer size for all ports to the default value of 2 kBytes.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 15 of 54

#### 4.1.2 Destroy Device

Function : **hssDestroy\_device**

Purpose : Destroy the HSS device specific structures.

Arguments :

<dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot :  
<dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.

Returns :

HSS\_OK - On success.  
HSS\_INVALID\_PARAM - Invalid dev\_id supplied.  
HSS\_PCI\_INIT\_FAIL - PCI initialisation failed.  
HSS\_ERROR - If the interrupt tasks have not been destroyed.

```
hssStatus hssDestroy_device(hssDeviceId dev_id);
```

Note : After this function is called, no other function call to the specified device will be valid, except for hssCreate\_device(..).

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 16 of 54

### 4.1.3 Port Exists?

Function : **hssPort\_exists**

Purpose : Determine whether a port exists on the specified device.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to query.

Returns :

- TRUE - If the port exists in hardware.
- FALSE - If the port does not exist in hardware.

```
hssBool hssPort_exists(hssDeviceId dev_id, hssPortId port_id);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 17 of 54



#### 4.1.4 Set Port Configuration

Function : **hssSet\_port\_config**

Purpose : Set port protocol and protocol configuration.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to configure.
- <p\_info> - Pointer to information struct used for configuration.

Returns :

- HSS\_OK - On success.
- HSS\_PCI\_INIT\_FAIL - PCI initialisation failed.
- HSS\_ERROR - If the TX/RX tasks have not been destroyed.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_PORT\_NOT\_INSTALLED - If the port does not exist.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.
- HSS\_INCORRECT\_PARAM\_COMBINATION - If an incorrect parameter combination was selected in the protocol structure.

Note : The <p\_info> pointer must point to a valid hssProtocolInfo structure with all protocol information set as required. If only a few items need to change, the hssGet\_port\_config(..) function should be used to fill in the rest of the structure.

Warning : Do not call this function while sending or receiving data as this may result in data loss.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 18 of 54

#### 4.1.5 Get Port Configuration

Function : **hssGet\_port\_config**

Purpose : Get port protocol and protocol configuration.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to get configuration info from.
- <p\_info> - Pointer to information struct used for configuration.

Returns :

- HSS\_OK - On success.
- HSS\_ERROR - If the TX/RX tasks have not been destroyed.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssGet_port_config(hssDeviceId dev_id, hssPortId port_id,  
hssProtocolInfo* p_info);
```

Note : The <p\_info> pointer must point to an existing hssProtocolInfo structure.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 19 of 54

#### 4.1.6 Open Port

Function : **hssOpen\_port**

Purpose : Open specified port for send and receive.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to open for send and receive.
- <priority> - Priority of the send, receive and clock detection task servicing this port.

Returns :

- HSS\_OK - On success.
- HSS\_ERROR - If opening of port failed.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_PORT\_NOT\_INSTALLED - If the port does not exist.
- HSS\_PORT\_NOT\_CONFIGURED - If an 'Open' is attempted on a port before configuring the port.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.
- HSS\_MEM\_ALLOC\_FAILED - If failed to create semaphore or spawn receive task.

```
hssStatus hssOpen_port(hssDeviceId dev_id, hssPortId port_id, hssINT32 priority);
```

Function : **hssOpen\_port\_fp**

Purpose : Open specified port for send and receive with floating point functionality.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to open for send and receive.
- <priority> - Priority of the send, receive and clock detection task servicing this port.
- <fp\_options> - Floating point enable for send, receive and clock detect task :  
HSS\_TX\_TASK\_FP\_ENABLE,  
HSS\_RX\_TASK\_FP\_ENABLE,  
HSS\_CLK\_TASK\_FP\_ENABLE.

Returns :

- HSS\_OK - On success.
- HSS\_ERROR - If opening of port failed.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_PORT\_NOT\_INSTALLED - If the port does not exist.
- HSS\_PORT\_NOT\_CONFIGURED - If an 'Open' is attempted on a port before configuring the port.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.
- HSS\_MEM\_ALLOC\_FAILED - If failed to create semaphore or spawn receive task.

```
hssStatus hssOpen_port_fp(hssDeviceId dev_id, hssPortId port_id,  
hssINT32 priority, char fp_options);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 20 of 54

Note : These functions must be called prior to attempting to send or receive on any channel of the specified port.

Opening a port spawns a receive, send and clock detect task for that specific port. The priority of these tasks is specified by <priority>.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 21 of 54

#### 4.1.7 Close Port

Function : **hssClose\_port**

Purpose : Close specified port for send and receive.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to close for send and receive.

Returns :

- HSS\_OK - On success.
- HSS\_ERROR - If opening of port failed or TX/RX tasks have not been destroyed.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_PORT\_NOT\_INSTALLED - If the port does not exist.
- HSS\_PORT\_NOT\_CONFIGURED - If an 'Open' is attempted on a port before configuring the port.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssClose_port(hssDeviceId dev_id, hssPortId port_id);
```

Note : Closing a Port A second time has no effect and still returns HSS\_OK, since the port was successfully closed.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 22 of 54

#### 4.1.8 Send Data

Function : **hssSend\_data**

Purpose : Send data over the specified channel.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port on which data must be sent.
- <chan\_id> - Channel on which data must be sent. If a port has only one channel, <chan\_id> = 0.
- <nr\_bytes> - Number of bytes to send.
- <p\_data> - Pointer to buffer with at least <nr\_bytes> bytes of data.
- <timeout> - Not used anymore.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_PORT\_NOT\_INSTALLED - If the port does not exist.
- HSS\_PORT\_NOT\_OPEN - If the port is not open yet.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssSend_data(hssDeviceId dev_id, hssPortId port_id,  
hssChannelId chan_id, hssCount nr_bytes, hssBufferPtr p_data, hssInt32 timeout);
```

Note : The port must be opened before attempting to send data over it.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 23 of 54

#### 4.1.9 Add Receive Buffer

Function : **hssAdd\_receive\_buffer**

Purpose : Add a receive buffer to a specified channel.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port on which data must be received.
- <chan\_id> - Channel on which data must be received. If a port has only one channel, <chan\_id> = 0.
- <min\_nr\_bytes> - Minimum number of bytes to receive before Call-back function is called.
- <max\_nr\_bytes> - Maximum number of bytes to receive into this buffer.
- <p\_data> - Pointer to buffer with space for at least <max\_nr\_bytes> bytes of data.

Returns :

- HSS\_OK - On success.

```
hssStatus hssAdd_receive_buffer(hssDeviceId dev_id, hssPortId port_id,  
hssChannelId chan_id, hssCount min_nr_bytes, hssCount max_nr_bytes,  
hssBufferPtr p_data);
```

Note : This function is not used anymore. The receive buffers are added internally. The user may still call this function, but this function returns only HSS\_OK.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 24 of 54

#### 4.1.10 Remove Receive Buffer

Function : **hssRemove\_receive\_buffer**

Purpose : Remove a receive buffer from a specified channel.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port on which data must be received.
- <chan\_id> - Channel on which data must be received. If a port has only one channel, <chan\_id> = 0.
- <p\_data> - Pointer to buffer to be removed.

Returns :

- HSS\_OK - On success.

```
hssStatus hssRemove_receive_buffer(hssDeviceId dev_id, hssPortId port_id,  
hssChannelId chan_id, hssBufferPtr p_data);
```

Note : This function is not used anymore. The receive buffers are removed internally. The user may still call this function, but this function returns only HSS\_OK.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 25 of 54



#### 4.1.11 Add Call-back

Function : **hssAdd\_callback**

Purpose : Add a user defined Call-back routine.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <cb\_type> - Call-back type, one of :  
HSS\_CB\_ON\_SEND\_BEGIN,  
HSS\_CB\_ON\_SEND\_DONE,  
HSS\_CB\_ON\_RECEIVE\_DONE,  
HSS\_CB\_ON\_CLOCK\_DETECT.
- <Call-back> - User function.
- <user\_id> - User identifier. This identifier will be passed to the Call-back function when it is called.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.
- HSS\_MEM\_ALLOC\_FAILED - If HSS Call-back node could not be created in memory.

```
hssStatus hssAdd_callback(hssDeviceId dev_id, hssCallbackType cb_type,  
hssCallback Call-back, hssUserId user_id);
```

Note : Four Call-backs are provided for user notification from the driver :

**HSS\_CB\_ON\_SEND\_BEGIN :**

This Call-back will be called as soon as the data has been handed over to the driver for sending.

**HSS\_CB\_ON\_SEND\_DONE :**

This Call-back will be called when all the data for a given send has been sent by the driver.

**HSS\_CB\_ON\_RECEIVE\_DONE :**

This Call-back will be called when a block of data has been received by the driver. The user must add at least one of these Call-backs to receive data.

Only one Call-back for each above type per device is recommended. The Call-back function receives the port id, such that the user can distinguish which port triggered the Call-back. More than one Call-back function may be used, in which case the Call-backs will be called in the sequence they were added.

**HSS\_CB\_ON\_CLOCK\_DETECT :**

This Call-back will be called when a clock signal has been detected on a port. The user must add only one of these Call-backs. This Call-back function will only be called once a port has been instructed to detect a clock signal, e.g. calling the function `hssClock_detect()`.

Note :

**HSS\_CB\_ON\_RECEIVE\_BEGIN :**

This Call-back does not exist anymore.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 26 of 54

#### 4.1.12 Remove Call-back

Function : **hssRemove\_callback**

Purpose : Remove a user defined Call-back routine.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <cb\_type> - Call-back type, one of :  
HSS\_CB\_ON\_SEND\_BEGIN,  
HSS\_CB\_ON\_SEND\_DONE,  
HSS\_CB\_ON\_RECEIVE\_DONE,  
HSS\_CB\_ON\_CLOCK\_DETECT.
- <Call-back> - User function to remove.
- <user\_id> - User identifier. This identifier must be the same as the one passed to hssAdd\_callback.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.

```
hssStatus hssRemove_callback(hssDeviceId dev_id, hssCallbackType cb_type,  
hssCallback Call-back, hssUserId user_id);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 27 of 54

#### 4.1.13 Detecting an active clock signal on ports

Function : **hssClock\_detect**

Purpose : Set up a port to detect when clock signal becomes active.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port on which to detect clock signal.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id or port\_id supplied.
- HSS\_PORT\_NOT\_INSTALLED - If the port does not exist.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssClock_detect(hssDeviceld dev_id, hssPortId port_id);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 28 of 54

#### 4.1.14 Print out current version number

Function : **hssVersion\_print**

Purpose : To obtain the current version number of the driver and firmware software. This function essentially calls `hssBit_getstruct(..)` and prints out the contents of the `hssBoardBitInfo` struct. See Paragraph 4.1.15.

Arguments :

<dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot :  
<dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.

Returns :

HSS\_OK - On success.  
HSS\_INVALID\_PARAM - Invalid dev\_id supplied.  
HSS\_DEVICE\_BUSY - If no PCI buffer is available.  
HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssVersion_print(hssDeviceId dev_id);
```

Note : Run `hssCreate_device(dev_id)`; first.

Function : **hssFirmware\_version**

Purpose : Return the firmware version number stored in the EEPROM.

Arguments :

<dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot :  
<dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.  
<version> - Return value for version number :  $\text{version} * 100 + \text{revision} * 10 + \text{beta}$ .

Returns :

HSS\_OK - On success.  
HSS\_INVALID\_PARAM - Invalid dev\_id supplied.  
HSS\_DEVICE\_NOT\_FOUND - If HSS device <dev\_id> was not found on the PCI bus.  
HSS\_MEM\_INVALID\_ADDRESS - If the HSS device PCI address was not valid.  
HSS\_MEM\_EEPROM\_BUSY - If the HSS device could not read version number from EEPROM.

```
hssStatus hssFirmware_version(hssDeviceId dev_id, hssUINT32 *version);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 29 of 54

#### 4.1.15 HSS BIT

The following structures define the HSS Built\_In\_Test variables (defined in hssControllfc.h) :

BIT Structures :

```
struct hssBoardBitInfoStruct
{
    hssUINT32 board_number;
    hssUINT32 board_type;
    hssUINT32 firmware_version;
    hssUINT32 firmware_revision;
    hssUINT32 firmware_beta;
    hssUINT32 oscillator_freq;
    hssUINT32 hss_scc_mode[HSS_HW_NR_SCC];
    hssUINT32 hss_smc_mode[HSS_HW_NR_SMC];
    char firmware_creation_date[30];
};
typedef struct hssBoardBitInfoStruct hssBoardBitInfo;

struct hssSendBitInfoStruct
{
    hssCount nr_accepted;
    hssCount nr_rejected;
    hssCount nr_errors;
    hssCount nr_sent;
    hssCount nr_bytes_accepted;
    hssCount nr_bytes_rejected;
    hssCount nr_bytes_sent;
};
typedef struct hssSendBitInfoStruct hssSendBitInfo;

struct hssReceiveBitInfoStruct
{
    hssCount nr_buffers_busy;
    hssCount nr_received;
    hssCount nr_bytes_received;
    hssCount nr_errors;
};
typedef struct hssReceiveBitInfoStruct hssReceiveBitInfo;
```

Main BIT Structure :

```
struct hssBitInfoStruct
{
    hssBoardBitInfo board_bit;
    hssSendBitInfo tx_scc_bit[HSS_HW_NR_SCC];
    hssReceiveBitInfo rx_scc_bit[HSS_HW_NR_SCC];
    hssSendBitInfo tx_smc_bit[HSS_HW_NR_SMC];
    hssReceiveBitInfo rx_smc_bit[HSS_HW_NR_SMC];
};
typedef struct hssBitInfoStruct hssBitInfo;
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 30 of 54

Three functions give access to the HSS Built\_In\_Test structures :

Function : **hssBit\_getstruct**

Purpose : To obtain the latest BIT variables.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <bit\_info> - Pointer to BIT info struct.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssBit_getstruct(hssDeviceId dev_id, hssBitInfo *bit_info);
```

Function : **hssBit\_report**

Purpose : To display each port's statistics.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssBit_report(hssDeviceId dev_id);
```

Function : **hssBit\_clear**

Purpose : To clear each port's counters.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.
- HSS\_DEVICE\_BUSY - If no PCI buffer is available.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within a certain time.

```
hssStatus hssBit_clear(hssDeviceId dev_id);
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 31 of 54

#### 4.1.16 Polled Mode Setting

Note : This function is only available in HSS version 3.5.4.

Function : **hssEnable\_polled\_mode**

Purpose : Setup a port to polled mode.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <port\_id> - Port to set to polled mode.
- <ptr\_to\_buffer> - Pointer to four RX buffers.

Returns :

- HSS\_OK - On success.
- HSS\_ERROR - If the port is not open or if High-Speed Mode has been enabled already, this mode is not supported.
- HSS\_INVALID\_PARAM - If <dev\_id> is incorrect.
- HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within HSS\_CONFIG\_TIMEOUT.

```
hssStatus hssEnable_polled_mode(hssDeviceId dev_id, hssPortId port_id,  
unsigned char *ptr_to_buffer[]);
```

Note : Call this function after opening the port. When the port is closed, the port reverts back to normal (interrupt) mode.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 32 of 54

#### 4.1.17 High-Speed Mode Setting

Function : **hssEnable\_high\_speed\_port**

Purpose : Setup Port A on the HSS Adapter to High-Speed Mode. Only supported on a HSS Adapter with a 100 MHz MPC862 processor.

Arguments :

<dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.

Returns :

HSS\_OK - On success.  
HSS\_ERROR - The HSS Adapter does not support High-Speed Mode.  
HSS\_INVALID\_PARAM - If <dev\_id> is incorrect.  
HSS\_DEVICE\_NOT\_RESPONDING - If the HSS control block could not be accessed within HSS\_CONFIG\_TIMEOUT.

```
hssStatus hssEnable_high_speed_port(hssDeviceId dev_id);
```

Note : Call this function before opening the port. Once Port A has been setup to High-Speed Mode, it is not possible to revert back to normal mode. All other ports are disabled during High-Speed Mode.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 33 of 54



#### 4.1.18 Enable / Disable POST

Function : **hssPost\_enable**

Purpose : Enable / disable selected POSTs.

Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <test\_enable> - One or all of the following ORed together :  
HSS\_POST\_RAM\_DATA\_ENABLE,  
HSS\_POST\_RAM\_ADDR\_ENABLE,  
HSS\_POST\_RAM\_DEV\_ENABLE,  
HSS\_POST\_KERNEL\_CRC\_ENABLE.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.
- HSS\_DEVICE\_NOT\_FOUND - If HSS device <dev\_id> was not found on the PCI bus.
- HSS\_MEM\_INVALID\_ADDRESS - If the HSS device PCI address was not valid.
- HSS\_MEM\_EEPROM\_BUSY - If the HSS device could not read the version number from EEPROM.

```
hssStatus hssPost_enable(hssDeviceId dev_id, hssUINT8 test_enable);
```

Note : This function may be called without running hssCreate\_device(0) first.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 34 of 54

#### 4.1.19 Return POST Status

Function : **hssPost\_status**  
Purpose : Return POST status or error code.  
Arguments :

- <dev\_id> - Device ID on the PCI bus. The HSS device in the lowest PCI slot : <dev\_id> = 0, next HSS device : <dev\_id> = 1, etc.
- <status> - Byte returning the error code of the POST. One of :
  - HSS\_OK - On success.
  - HSS\_EEPROM\_UPDATE - EEPROM was corrupt and was reprogrammed.
  - HSS\_RAM\_DATA\_ERROR - RAM databus error.
  - HSS\_RAM\_ADDR\_ERROR - RAM addressbus error.
  - HSS\_RAM\_DEVICE\_ERROR - RAM device error.
  - HSS\_FLASH\_MAGIC\_ERROR - Flash magic number corrupt.
  - HSS\_FLASH\_KERNEL\_CRC\_ERROR - Flash CRC error.
  - HSS\_EEPROM\_ERROR - EEPROM read / write error.

Returns :

- HSS\_OK - On success.
- HSS\_INVALID\_PARAM - Invalid dev\_id supplied.
- HSS\_DEVICE\_NOT\_FOUND - If HSS device <dev\_id> was not found on the PCI bus.
- HSS\_MEM\_INVALID\_ADDRESS - If the HSS device PCI address was not valid.
- HSS\_MEM\_EEPROM\_BUSY - If the HSS device could not read the version number from EEPROM.

```
hssStatus hssPost_status(hssDeviceId dev_id, hssUINT8 *status);
```

Note : This function may be called without running hssCreate\_device(0) first.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 35 of 54

## 4.2 Driver Data Structures

Each protocol defines a protocol information structure used to configure a port with protocol specific options. This paragraph details the information structures used by each protocol and explains the use and limitations of every structure member.

**hssProtocolInfo Structure :**

```
struct hssProtocolInfoStruct
{
    hssUINT32 protocol_id;

    /* only used for HSS Frontpanel Adapters - value ignored otherwise */
    hssUINT32 elec_interface;

    union
    {
        /* SCC info */
        hssUartInfo uart;
        hssHdlcInfo hdlc;
        hssBisyncInfo bisync;

        /* SMC info */
        hssSmcUartInfo smc_uart;
    } info;
};
typedef struct hssProtocolInfoStruct hssProtocolInfo;
```

**protocol\_id :**

```
HSS_PROTOCOL_UART
HSS_PROTOCOL_HDLC
HSS_PROTOCOL_BISYNC
HSS_PROTOCOL_SMC_UART
```

**elec\_interface :** (only used for HSS Frontpanel Adapters)

```
HSS_RS485 /* RS485/422 */
HSS_RS232_INT_CTL_LINES /* RS232 : control lines (RTS, CTS, CD) are
                           connected internally */
HSS_RS232_EXT_CTL_LINES /* RS232 : control lines (RTS, CTS, CD) need to
                           be connected externally */
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 36 of 54

## 4.2.1 UART Mode

This protocol may only be used with the four SCC ports : Ports A - D.

### 4.2.1.1 UART Protocol Information Structure

The following structure is defined in the file hssControllfc.h and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in hssControllfc.h.

```
struct hssUartInfoStruct
{
    hssUINT32 baud_rate;
    hssUINT32 clock_source;
    hssUINT32 flow_control;
    hssUINT32 stop_bits;
    hssUINT32 data_bits;
    hssUINT32 uart_mode;
    hssUINT32 freeze_tx;
    hssUINT32 rx_zero_stop_bits;
    hssUINT32 sync_mode;
    hssUINT32 disable_rx_while_tx;
    hssUINT32 parity_enable;
    hssUINT32 rx_parity;
    hssUINT32 tx_parity;
    hssUINT32 diag_mode;
    hssUINT32 max_receive_bytes;
    hssUINT32 max_idl;
    hssUINT32 brkcr;
    hssUINT32 parec;
    hssUINT32 frmec;
    hssUINT32 nosec;
    hssUINT32 brkec;
    hssUINT32 uaddr1;
    hssUINT32 uaddr2;
    hssUINT32 toseq;
    hssUINT32 cc[8];
    hssUINT32 rccm;
};
typedef struct hssUartInfoStruct hssUartInfo;
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 37 of 54

4.2.1.2 UART Protocol Information Structure Members

Name	Options	Description
baud_rate	1 200 - 115 kbit/s (RS-232) 1 200 - 2.4 Mbit/s (RS-422/RS-485) 0 - Indicates separate transmitter and receiver baud rates will be set. Any values permissible. Units in bit/s.	Used to specify a single baud rate for both transmitter and receiver.
clock_source	HSS_CLOCK_DEFAULT	HSS_CLOCK_DEFAULT connects BRG [1 - 4] to Ports [A - D].
	HSS_CLOCK_BRG1 HSS_CLOCK_BRG2 HSS_CLOCK_BRG3 HSS_CLOCK_BRG4	B a u d R a t e Generators (BRG) [1 - 4].
	HSS_CLOCK_EXT1 HSS_CLOCK_EXT2 HSS_CLOCK_EXT3 HSS_CLOCK_EXT4	External Clocks connected on Pins : RXCLK[1-4] (RS-232) or CLKIN [ 1 - 4 ] (RS-485/RS-422).  Note : HSS_CLOCK_EXT[1-2] can only be used for SCC Port[A and B], while HSS_CLOCK_EXT[3-4] can only be used for SCC Ports [C and D].
flow_control	HSS_UART_FLOW_NORMAL HSS_UART_FLOW_ASYNC	Normal or asynchronous flow control.
stop_bits	HSS_UART_STOP_BITS_ONE HSS_UART_STOP_BITS_TWO	Number of full stop bits.
data_bits	HSS_UART_DATA_BITS_5 HSS_UART_DATA_BITS_6 HSS_UART_DATA_BITS_7 HSS_UART_DATA_BITS_8 HSS_UART_DATA_BITS_9 HSS_UART_DATA_BITS_10 HSS_UART_DATA_BITS_11 HSS_UART_DATA_BITS_12 HSS_UART_DATA_BITS_13 HSS_UART_DATA_BITS_14	Number of data bits. Note : Only ports I and J (i.e. the SMC ports) support nine or more data bits.
uart_mode	HSS_UART_MODE_NORMAL HSS_UART_MODE_MAN_MM HSS_UART_MODE_AUTO_MM	Select UART mode : Normal, manual multidrop or automatic multidrop mode.
freeze_tx	HSS_UART_FREEZE_TX_NORMAL HSS_UART_FREEZE_TX_FREEZE	Pause (freeze) transmission. Transmission continues when set back to normal.
rx_zero_stop_bits	HSS_UART_RX_ZERO_STOP_BITS_NORMAL HSS_UART_RX_ZERO_STOP_BITS_NONE	If set to none, the receiver receives data without stop bits.
sync_mode	HSS_UART_SYNC_MODE_ASYNC HSS_UART_SYNC_MODE_SYNC	Select asynchronous (normal) or synchronous mode.
disable_rx_while_tx	HSS_UART_DISABLE_RX_WHILE_TX_NORMAL HSS_UART_DISABLE_RX_WHILE_TX_DISABLE	Enable (normal) or disable receiver while transmitting. Used in multidrop mode to prevent reception of own messages.

Name	Options		Description
parity_enable	HSS_UART_PARITY_NO_PARITY HSS_UART_PARITY_ENABLE		Enable or disable parity checking.
rx_parity, tx_parity	HSS_UART_PARITY_ODD HSS_UART_PARITY_LOW HSS_UART_PARITY_EVEN HSS_UART_PARITY_HIGH		Receive and transmit parity. Parity will only be checked if parity is enabled.
diag_mode	HSS_DIAG_NORMAL	Normal operation. Use this for <b>external loopback</b> .	Set diagnostic mode.  <b>External loopback - RS-485 :</b> Connect TXD+ to RXD+, TXD- to RXD-, (TXCLK+ to RXCLK+ and TXCLK- to RXCLK- for synchronous mode).  <b>External loopback - RS-232 :</b> Connect TXD to RXD, (TXCLK to RXCLK for synchronous mode) and RTS to CTS and CD.  For HSS Frontpanel I/O Adapter : Program <i>elec_interface=HSS_RS232_INT_CTL_LINES</i> and connect TXD to RXD, (TXCLK to RXCLK for synchronous mode). Ignore RTS, CTL and CD.
	HSS_DIAG_LOOPBACK	<b>Internal loopback :</b> TXD and RXD are connected internally. The value on RXD, CTS and CD is ignored. The transmitter and receiver share the same clock source.	
	HSS_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
max_receive_bytes	1 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function <i>hssCreate_device_ex()</i> ).		Maximum number of bytes that may be copied into a buffer.
max_idl	0 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function <i>hssCreate_device_ex()</i> ).		Maximum idle characters. When a character is received, the receiver begins counting idle characters. If <i>max_idl</i> idle characters are received before the next data character, an idle timeout occurs and the buffer is closed. Thus, <i>max_idl</i> offers a way to demarcate frames. To disable the feature, clear <i>max_idl</i> . The bit length of an idle character is calculated as follows : 1 + data length (5-9) + 1 (if parity is used) + number of stop bits (1-2). For 8 data bits, no parity, and 1 stop bit, the character length is 10 bits.
brkcr	0 - 2 048		Number of break characters sent by transmitter. For 8 data bits, no parity, 1 stop bit, and 1 start bit, each break character consists of 10 zero bits.
parec	0 - 65 535		Number of received parity errors.
frmec	0 - 65 535		Number of received characters with framing errors.
nosec	0 - 65 535		Number of received characters with noise errors.
brkec	0 - 65 535		Number of break conditions on the signal.
uaddr1, uaddr2	0x0000 - 0x00FF		Address in multidrop mode. Only the lower 8 bits are used so the upper 8 bits should be cleared.

Name	Options	Description
toseq	0x0000 - 0x00FF	Transmit out of sequence character (e.g. XON, XOFF).
cc[8]	0b00-----cccccccc - Valid entry. 0b10-----cccccccc - Entry not valid and is not used.	Control character 1 to 8. These characters can be used to delimit received messages.  ----- (6 bits) - Reserved. Initialise to zero.  cccccccc (8 bits) - Defines control characters to be compared to the incoming character.
rccm	0b11-----00000000 - Ignore these bits when comparing incoming character. 0b11-----11111111 - Enable comparing the incoming character to cc[n].	Receive control character mask. A one enables comparison and a zero masks it.

## 4.2.2 HDLC Mode

This protocol may only be used with the four SCC ports : Ports A - D.

### 4.2.2.1 HDLC Protocol Information Structure

The following structure is defined in the file hssControllfc.h and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in hssControllfc.h.

```
struct hssHdlcInfoStruct
{
    hssUINT32 tx_baud_rate;
    hssUINT32 rx_baud_rate;
    hssUINT32 clock_source;
    hssUINT32 crc_mode;
    hssUINT32 diag_mode;
    hssUINT32 max_receive_bytes;
    hssUINT32 max_frame_bytes;
    hssUINT32 address_mask;
    hssUINT32 address1;
    hssUINT32 address2;
    hssUINT32 address3;
    hssUINT32 address4;
    hssUINT32 nr_flags_between_frames;
    hssUINT32 retransmit_enabled;
    hssUINT32 flag_sharing_enabled;
    hssUINT32 rx_disabled_during_tx;
    hssUINT32 bus_mode;
    hssUINT32 bus_mode_rts;
    hssUINT32 multiple_tx_frames;
    hssUINT32 encoding_method;
    hssUINT32 preamble_length;
    hssUINT32 preamble_pattern;
    hssUINT32 send_idles_or_flags;
};
typedef struct hssHdlcInfoStruct hssHdlcInfo;
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 41 of 54



#### 4.2.2.2 HDLC Protocol Information Structure Members

Name	Options		Description
tx_baud_rate, rx_baud_rate	1 200 - 115 kbit/s (RS-232) 1 200 - 12 Mbit/s (RS-422/RS-485) Any values permissible. Units in bit/s.		NB: It is not possible to specify the transmitter and receiver baud rate separately anymore. Set both variables to the same baud rate.
tx_clock_direction rx_clock_direction	_____		OBSOLETE VARIABLES
clock_source	HSS_CLOCK_DEFAULT		HSS_CLOCK_DEFAULT connects BRG [1 - 4] to Port [A - D]. For <b>NRZ/NRZI</b> : When transmit clock is set to HSS_CLOCK_BRG[1-4], then receive clock is still set to HSS_CLOCK_EXT[1-4] for Port [A - D]. For <b>FM0/1, Manchester and Diff. Manchester</b> : Transmit and receive clocks can be set to one of HSS_CLOCK_BRG[1-4] or HSS_CLOCK_EXT[1-4].
	HSS_CLOCK_BRG1 HSS_CLOCK_BRG2 HSS_CLOCK_BRG3 HSS_CLOCK_BRG4	BRGs [1 - 4].	
	HSS_CLOCK_EXT1 HSS_CLOCK_EXT2 HSS_CLOCK_EXT3 HSS_CLOCK_EXT4	External Clocks connected on Pins : RXCLK[1-4] (RS-232) or CLKIN [ 1 - 4 ] (RS-485/RS-422).  Note : HSS_CLOCK_EXT[1-2] can only be used for SCC Ports [A and B], while HSS_CLOCK_EXT[3-4] can only be used for SCC Ports [C and D].	
crc_mode	HSS_HDLC_CRC_MODE_16_BIT HSS_HDLC_CRC_MODE_32_BIT		HDLC CRC mode.
diag_mode	HSS_DIAG_NORMAL	Normal operation. Use this for <b>external loopback</b> .	Set diagnostic mode.  <b>External loopback - RS-485</b> : Connect TXD+ to RXD+, TXD- to RXD-, (TXCLK+ to RXCLK+ and TXCLK- to RXCLK- for synchronous mode).  <b>External loopback - RS-232</b> : Connect TXD to RXD, (TXCLK to RXCLK for synchronous mode) and RTS to CTS and CD.  For HSS Frontpanel I/O Adapter : Program <i>elec_interface</i> = <i>HSS_RS232_INT_CTL_LINES</i> and connect TXD to RXD, (TXCLK to RXCLK for synchronous mode). Ignore RTS, CTL and CD.  For synchronous mode : See <b>encoding_method</b> .
	HSS_DIAG_LOOPBACK	<b>Internal loopback</b> : TXD and RXD are connected internally. The value on RXD, CTS and CD is ignored. The transmitter and receiver share the same clock source.	
	HSS_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
max_receive_bytes	1 to (2 048 - CRC bytes (2 or 4)) (default) or up to (32 kBytes - CRC bytes (2 or 4)), depending on how many bytes have been allocated to the RX and TX buffers (See function <i>hssCreate_device_ex()</i> ).		Maximum number of bytes to receive before closing buffer. Set equal to <i>max_frame_bytes</i> .

Name	Options	Description
max_frame_bytes	1 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hssCreate_device_ex()).	Maximum number of bytes per frame. Set equal to the number of data bytes plus the number of CRC bytes (either two or four) per frame.
address_mask	0x0000 - 0xFFFF	HDLC address mask. A one enables comparison and a zero masks it.
address1, address2, address3, address4	0x0000 - 0xFFFF	Four address registers for address recognition. The SCC reads the frame address from the HDLC receiver, compares it with the address registers, and masks the result with address_mask. For example, to recognize a frame that begins 0x7E (flag), 0x68, 0xAA, using 16-bit address recognition, the address registers should contain 0xAA68 and address_mask should contain 0xFFFF. For 8-bit addresses, clear the eight high-order address bits.
nr_flags_between_frames	0 - 15	Minimum number of flags between or before frames.
retransmit_enabled	TRUE FALSE	Enable re-transmit.
flag_sharing_enabled	TRUE FALSE	Enable flag sharing.
rx_disabled_during_tx	TRUE FALSE	Disable receive during transmit.
bus_mode	TRUE FALSE	Enable bus mode.
bus_mode_rts	TRUE FALSE	Enable special RTS operation in HDLC bus mode.
multiple_tx_frames	TRUE FALSE	Enable multiple frames in transmit FIFO.
encoding_method	HSS_HDLC_ENCODING_METHOD_NRZ HSS_HDLC_ENCODING_METHOD_NRZI_MARK HSS_HDLC_ENCODING_METHOD_NRZI_SPACE HSS_HDLC_ENCODING_METHOD_FM0 HSS_HDLC_ENCODING_METHOD_FM1 HSS_HDLC_ENCODING_METHOD_MANCHESTER HSS_HDLC_ENCODING_METHOD_DIFF_MANCHESTER	TX/RX encoding method. NRZ and NRZI use no DPLL. FM0/1, Manchester and Diff_Manchester use the DPLL for clock recovery. The clock rate is 16x when the DPLL is used.
preamble_length	HSS_DPLL_PREAMBLE_LENGTH_0 HSS_DPLL_PREAMBLE_LENGTH_8 HSS_DPLL_PREAMBLE_LENGTH_16 HSS_DPLL_PREAMBLE_LENGTH_32 HSS_DPLL_PREAMBLE_LENGTH_48 HSS_DPLL_PREAMBLE_LENGTH_64 HSS_DPLL_PREAMBLE_LENGTH_128	Determines the length of the preamble pattern.
preamble_pattern	HSS_DPLL_PREAMBLE_PATTERN_00 HSS_DPLL_PREAMBLE_PATTERN_10 HSS_DPLL_PREAMBLE_PATTERN_01 HSS_DPLL_PREAMBLE_PATTERN_11	Determines what bit pattern precedes each TX frame.

Name	Options	Description
send_idles_or_flags	HSS_HDLC_SEND_IDLEES HSS_HDLC_SEND_FLAGS_SYNCES	Send either idles or flags/syncs between frames as defined by the protocol. For HDLC the flag is defined as 0x7E. NRZI encoding methods may only be used with flags/syncs.

4.2.2.3 Preamble Requirements

Decoding Method	Preamble Pattern	Minimum Preamble Length Required
NRZI Mark	All zeros	8-bit
NRZI Space	All ones	8-bit
FM0	All ones	8-bit
FM1	All zeros	8-bit
Manchester	101010...10	8-bit
Differential Manchester	All ones	8-bit

### 4.2.3 BISYNC Mode

This protocol may only be used with the four SCC ports : Ports A - D.

#### 4.2.3.1 BISYNC Protocol Information Structure

The following structure is defined in the file hssControllfc.h and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in hssControllfc.h.

```
struct hssBisyncInfoStruct
{
    hssUINT32 baud_rate;
    hssUINT32 clock_source;
    hssUINT32 max_receive_bytes;
    hssUINT32 min_no_sync_pairs;
    hssUINT32 crc_select;
    hssUINT32 receive_bcs;
    hssUINT32 rx_transparant_mode;
    hssUINT32 reverse_data;
    hssUINT32 disable_rx_while_tx;
    hssUINT32 rx_parity;
    hssUINT32 tx_parity;
    hssUINT32 diag_mode;
    hssUINT32 crcc;
    hssUINT32 prcrc;
    hssUINT32 ptcrc;
    hssUINT32 parec;
    hssUINT32 bsync;
    hssUINT32 bdle;
    hssUINT32 cc[8];
    hssUINT32 rccm;
    hssUINT32 sync;
    hssUINT32 syn_length;
    hssUINT32 send_idles_or_flags;
};
typedef struct hssBisyncInfoStruct hssBisyncInfo;
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 45 of 54

#### 4.2.3.2 BISYNC Protocol Information Structure Members

Name	Options	Description	
baud_rate	1 200 - 115 kbit/s (RS-232) 1 200 - 12 Mbit/s (RS-422/RS-485) Any values permissible.	Used to specify a single baud rate for both transmitter and receiver.	
clock_source	HSS_CLOCK_DEFAULT	HSS_CLOCK_DEFAULT connects BRGs [1 - 4] to Ports [A - D].	
	HSS_CLOCK_BRG1 HSS_CLOCK_BRG2 HSS_CLOCK_BRG3 HSS_CLOCK_BRG4	BRGs [1 - 4].	When the transmit clock is set to HSS_CLOCK_BRG [1 - 4], then receive clock is still set to HSS_CLOCK_EXT[1-4] for Ports [A - D].
	HSS_CLOCK_EXT1 HSS_CLOCK_EXT2 HSS_CLOCK_EXT3 HSS_CLOCK_EXT4	External Clocks connected on Pins : RXCLK[1-4] (RS-232) or CLKIN [ 1 - 4 ] (RS-485/RS-422).  Note : HSS_CLOCK_EXT[1-2] can only be used for SCC Ports [A and B], while HSS_CLOCK_EXT[3-4] can only be used for SCC Ports [C and D].	
max_receive_bytes	1 to (2 048 - 2 CRC bytes) (default) or up to (32 kBytes - 2 CRC bytes), depending on how many bytes have been allocated to the RX and TX buffers (See function hssCreate_device_ex()).	Maximum number of bytes to receive before closing buffer.	
min_no_sync_pairs	0b0000 (0 pairs) - 0b1111 (16 pairs)	Minimum number of SYN1-SYN2 pairs sent between or before messages. The entire pair is always sent, regardless of the <b>syn_length</b> variable.	
crc_select	HSS_BISYNC_CRC_MODE_16 HSS_BISYNC_CRC_MODE_LRC	CRC selection. 1. CRC16 (X16 + X15 + X2 + 1) : Initialise <b>prcrc</b> and <b>ptcrc</b> to all zeros or all ones. 2. LRC (sum check) : For even LRC, initialise <b>prcrc</b> and <b>ptcrc</b> to zeros, for odd LRC initialise to ones.	
receive_bcs	TRUE FALSE	Enable Receive Block Check Sequence (BCS).	
rx_transparant_mode	TRUE FALSE	Enable Receiver transparent mode.  FALSE : Normal receiver mode with SYNC stripping and control character recognition.  TRUE : Transparent receiver mode. SYNC's, DLE's and control characters are recognised only after the leading DLE character. The receiver calculates the CRC16 sequence even if it is programmed to LRC while in transparent mode. Initialize <b>prcrc</b> to the CRC16 preset value before setting <b>rx_transparant_mode</b> .	
reverse_data	TRUE FALSE	Enable Reverse data.	

Name	Options		Description
disable_rx_while_tx	TRUE FALSE		Disable receiver while sending.
rx_parity tx_parity	HSS_BISYNC_PARITY_ODD HSS_BISYNC_PARITY_LOW HSS_BISYNC_PARITY_EVEN HSS_BISYNC_PARITY_HIGH		Receive and transmit parity. Parity is ignored unless <b>crc_select</b> = LRC.
diag_mode	HSS_DIAG_NORMAL	Normal operation. Use this for external loopback.	Set diagnostic mode.  <b>External loopback - RS-485 :</b> Connect TXD+ to RXD+, TXD- to RXD-, TXCLK+ to RXCLK+ and TXCLK- to RXCLK-.  <b>External loopback - RS-232 :</b> Connect TXD to RXD, TXCLK to RXCLK and RTS to CTS and CD.  For HSS Frontpanel I/O Adapter : Program <i>elec_interface</i> = <i>HSS_RS232_INT_CTL_LINES</i> and connect TXD to RXD, TXCLK to RXCLK. Ignore RTS, CTL and CD.
	HSS_DIAG_LOOPBACK	<b>Internal loopback :</b> TXD and RXD are connected internally. The value on RXD, CTS and CD is ignored. The transmitter and receiver share the same clock source.	
	HSS_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
crcc	0		CRC constant value.
prcrc ptcrc	0x0000 or 0xFFFF		Preset receiver / transmitter CRC16/LRC. These values should be preset to all ones or zeros, depending on the BCS used.
parec	0 - 65 535		Number of received parity errors.
bsync	0bv0000000ssssssss		BISYNC SYNC register. Contains the value of the SYNC character stripped from incoming data on receive once the receiver synchronizes to the data using the SYN1- SYN2 pair.  v - If v = 1 and the receiver is not in hunt mode when a SYNC character is received, this character is discarded.  ssssssss (8 bits) - SYNC character. When using 7-bit characters with parity, the parity bit should be included in the SYNC register value.
bdle	0bv0000000ddddd		BISYNC DLE register. In transparent mode, the receiver discards any DLE character received.  v - If v = 1 and the receiver is not in hunt mode when a DLE character is received, this character is discarded.  ddddddd (8 bits) - DLE character. This character tells the receiver that the next character is text.

Name	Options	Description
cc[8]	0b0bh-----ccccccc - Valid entry. 0b1bh-----ccccccc - Entry not valid and is not used.	Control character 1 to 8.  ----- (5 bits) - Reserved. Initialise to zero.  b - Block check sequence expected. A maskable interrupt is generated after the buffer is closed.  b = 0 : The character is written into the receive buffer and the buffer is closed.  b = 1 : The character is written into the receive buffer. The receiver waits for 1 LRC or 2 CRC bytes and then closes the buffer.  h - Enables hunt mode when the current buffer is closed.  h = 0 : The BISYNC controller maintains character synchronisation after closing the buffer.  h = 1 : The BISYNC controller enters hunt mode after closing the buffer. When b = 1, the controller enters hunt mode after receiving LRC or CRC.  ccccccc (8 bits) - Defines control characters to be compared to the incoming character. When using 7-bit characters with parity, include the parity bit in the character value.
rccm	0b11-----00000000 - Ignore these bits when comparing incoming character. 0b11-----11111111 - Enable comparing the incoming character to cc[n].	Receive control character mask. A one enables comparison and a zero masks it.
sync	0xssss (2 bytes)	SYNC character : Should be programmed with the sync pattern.
syn_length	HSS_BISYNC_SYNL_8 HSS_BISYNC_SYNL_16	HSS_BISYNC_SYNL_8 : Should be chosen to implement mono-sync protocol. The receiver synchronizes on an 8-bit sync pattern in <b>sync</b> .  HSS_BISYNC_SYNL_16 : The receiver synchronizes on a 16-bit sync pattern stored in <b>sync</b> .
send_idles_or_flags	HSS_BISYNC_SEND_IDLES HSS_BISYNC_SEND_FLAGS_SYNC	Send either idles or flags/syncs between frames as defined by the protocol. The flag character is equal to sync.

#### 4.2.4 SMC UART Mode

This protocol may only be used with the two SMC ports : Ports I and J.

##### 4.2.4.1 SMC UART Protocol Information Structure

The following structure is defined in the file hssControllfc.h and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in hssControllfc.h.

```
struct hssSmcUartInfoStruct
{
    hssUINT32 baud_rate;
    hssUINT32 clock_source;
    hssUINT32 stop_bits;
    hssUINT32 data_bits;
    hssUINT32 parity_enable;
    hssUINT32 parity_mode;
    hssUINT32 diag_mode;
    hssUINT32 max_receive_bytes;
    hssUINT32 max_idl;
};
typedef struct hssSmcUartInfoStruct hssSmcUartInfo;
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 49 of 54



#### 4.2.4.2 SMC UART Protocol Information Structure Members

Name	Options		Description
baud_rate	1 200 - 115.2 kbit/s (RS-232/RS-422/RS-485) Any values permissible. Units in bit/s.		Used to specify a single baud rate for both transmitter and receiver.
clock_source	HSS_CLOCK_DEFAULT		HSS_CLOCK_DEFAULT connects BRG [1-2] to Ports [I - J]. RX and TX clocks can be set to one of HSS_CLOCK_BRG[1-4] or HSS_CLOCK_EXT[1-4].
	HSS_CLOCK_BRG1 HSS_CLOCK_BRG2 HSS_CLOCK_BRG3 HSS_CLOCK_BRG4	BRGs [1 - 4].	
	HSS_CLOCK_EXT1 HSS_CLOCK_EXT2 HSS_CLOCK_EXT3 HSS_CLOCK_EXT4	External Clocks connected on Pins : RXCLK[1-4] (RS-232) or CLKIN[1-4] (RS-485/RS-422).  Note : HSS_CLOCK_EXT[1-2] can only be used for SMC Port I, while HSS_CLOCK_EXT[3-4] can only be used for SMC Port J.	
stop_bits	HSS_UART_STOP_BITS_ONE HSS_UART_STOP_BITS_TWO		Number of full stop bits.
data_bits	HSS_UART_DATA_BITS_5 HSS_UART_DATA_BITS_6 HSS_UART_DATA_BITS_7 HSS_UART_DATA_BITS_8 HSS_UART_DATA_BITS_9 HSS_UART_DATA_BITS_10 HSS_UART_DATA_BITS_11 HSS_UART_DATA_BITS_12 HSS_UART_DATA_BITS_13 HSS_UART_DATA_BITS_14		Number of data bits. Note : Only Ports I and J (i.e. the SMC ports) support nine or more data bits.
parity_enable	HSS_UART_PARITY_NO_PARITY HSS_UART_PARITY_ENABLE		Enable or disable parity checking.
parity_mode	HSS_UART_SMC_PARITY_ODD HSS_UART_SMC_PARITY_EVEN		Receive and transmit parity. Parity will only be checked if parity is enabled.
diag_mode	HSS_DIAG_NORMAL	Normal operation. Use this for <b>external loopback</b> .	Set diagnostic mode.  <b>External loopback - RS-485 :</b> Connect TXD+ to RXD+ and TXD- to RXD-.  <b>External loopback - RS-232 :</b> Connect TXD to RXD.
	HSS_DIAG_LOOPBACK	<b>Internal loopback :</b> TXD and RXD are connected internally. The value on RXD is ignored.	
	HSS_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
max_receive_bytes	1 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hssCreate_device_ex()).		Maximum number of bytes that may be copied into a buffer.

Name	Options	Description
max_idl	0 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hssCreate_device_ex()).	<p>Maximum idle characters. When a character is received, the receiver begins counting idle characters. If max_idl idle characters are received before the next data character, an idle timeout occurs and the buffer is closed. Thus, max_idl offers a way to demarcate frames. To disable the feature, clear max_idl. The bit length of an idle character is calculated as follows :</p> <p>1 + data length (5-14) + 1 (if parity is used) + number of stop bits (1-2). For 8 data bits, no parity, and 1 stop bit, the character length is 10 bits.</p>

5. **Getting Started**

After installing the host driver according to Paragraph 3.1, test the host driver following the test procedure given in hssTest.txt.

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 52 of 54

6. **Contact Details**

6.1 Contact Person

Direct all correspondence and / or support queries to the Project Manager at C<sup>2</sup>I<sup>2</sup> Systems.

6.2 Physical Address

C<sup>2</sup>I<sup>2</sup> Systems  
Unit 3, Rosmead Place, Rosmead Centre  
67 Rosmead Avenue  
Kenilworth  
Cape Town  
7708  
South Africa

6.3 Postal Address

C<sup>2</sup>I<sup>2</sup> Systems  
P.O. Box 171  
Rondebosch  
7701  
South Africa

6.4 Voice and Electronic Contacts

Tel : (+27) (0)21 683 5490  
Fax : (+27) (0)21 683 5435  
Email : [info@ccii.co.za](mailto:info@ccii.co.za)  
Email : [support@ccii.co.za](mailto:support@ccii.co.za)  
URL : <http://www.ccii.co.za/>

6.5 Product Support

Support on C<sup>2</sup>I<sup>2</sup> Systems products is available telephonically between Monday and Friday from 09:00 to 17:00 CAT. Central African Time (CAT = GMT + 2).

---

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 53 of 54

## Annexure A

### Making Changes to sysLib.c for X86

The PCI free memory space needs to be defined in the memory descriptor table. Consult the relevant reference manual and obtain the upper address of the PCI memory. Allocate at least 5 MBytes of memory per HSS Adapter. Subtract that amount from the upper address of the PCI memory, and use this value as the base of the PCI memory space.

Note : if there are other devices on the PCI bus, it may be necessary to allocate more memory.

Example : For two HSS adapters, allocate 10 MBytes of memory. If the upper address of the PCI memory space is defined as 0xFFFF0000, then subtracting 10 MBytes gives a base address of :

$$0xFFFF0000 - 0xA00000 = 0xFF500000.$$

In the Personal Computer (PC) 386/486/Pentium/Pentiumpro system-dependent library (sysLib.c), code (**shown in bold text**) needs to be added to the memory descriptor table, sysPhysMemDesc[] :

```
#ifndef CPU_PCI_MEM_ADRS
#define CPU_PCI_MEM_ADRS      0xFF500000 /* base of PCI MEM addr */
#endif

PHYS_MEM_DESC sysPhysMemDesc [] =
{
    /* adrs and length parameters must be page-aligned (multiples of
    4KB/4MB) */
    #if (VM_PAGE_SIZE == PAGE_SIZE_4KB)

        /* lower memory */
        ...
        /* video ram, etc */
        ...
        /* upper memory for OS */
        ...
        /* upper memory for Application */
        ...
        /* PCI I/O space */
        {
            (void *) CPU_PCI_MEM_ADRS,
            (void *) CPU_PCI_MEM_ADRS,
            (0xA00000),
            VM_STATE_MASK_VALID      |      VM_STATE_MASK_WRITABLE      |
            VM_STATE_MASK_CACHEABLE,      VM_STATE_VALID      |
            VM_STATE_WRITABLE | VM_STATE_CACHEABLE_NOT
        },

        /* entries for dynamic mappings - create sufficient entries */
        DUMMY_MMU_ENTRY,
        DUMMY_MMU_ENTRY,
        DUMMY_MMU_ENTRY,
        ...
        ...

    #else
        ...
    #endif
}
```

CCII/HSS/6-MAN/002	2009-09-03	Issue 4.2
CHSMAN02.WPD		Page 54 of 54