

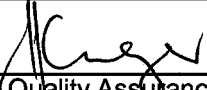


User Manual
for the
4-Channel New Generation
and
8-Channel High-Speed Serial I/O Adapters
Linux Software Driver

C²I² Systems Document No.	CCII/HSS8/6-MAN/003
Document Issue	1.2
Issue Date	2009-08-20
Print Date	2009-08-20
File Name	W:\HSS8\TECH\MAN\CH8MAN03.WPD
Distribution List No.	

© C²I² Systems The copyright of this document is the property of C²I² Systems. The document is issued for the sole purpose for which it is supplied, on the express terms that it may not be copied in whole or part, used by or disclosed to others except as authorised in writing by C²I² Systems.

Signature Sheet

Name	Signature	Date
Completed by	 Project Engineer Board Level Products C ² I ² Systems	2009-09-02
X. Kruger pp		
Accepted by	 Project Manager Board Level Products C ² I ² Systems	2009-09-02
W. DeLamar		
Accepted by	 Quality Assurance C ² I ² Systems	2009-09-02
X. Kruger		

Signature Sheet

Name	Signature	Date
Completed by	Project Engineer Board Level Products C ² I ² Systems	
	Project Manager Board Level Products C ² I ² Systems	
Accepted by	Project Engineer Board Level Products C ² I ² Systems	
	Project Manager Board Level Products C ² I ² Systems	
Accepted by	Quality Assurance C ² I ² Systems	

Amendment History

Issue	Description	Date	ECP No.
0.1	First draft	2004-11-09	-
0.2	Changes to driver installation	2004-11-24	-
0.3	Changed driver distribution table	2004-11-26	-
1.0	Baselined document	2004-12-20	-
1.1	Implemented ECP, made references to adapters more generic	2006-06-29	CCII/HSS8/6-ECP/025
1.2	Improve document naming conventions	2009-08-22	CCII/HSS/6-ECP/042

Contents

1. Scope	1
1.1 Identification	1
1.2 System Overview	1
1.3 Document Overview	1
2. Applicable and Reference Documents	2
2.1 Applicable Documents	2
2.2 Reference Documents	2
3. HSS8 Linux Software Driver Distribution	3
4. Installation Procedure	4
4.1 Compiling the HSS8 Linux Software Driver Module	4
4.2 Loading the HSS8 Linux Software Driver	4
5. Using the HSS8 Linux Software Driver	5
5.1 Opening of Devices	5
5.2 Configuring the Channels	5
5.3 Adding Receive Call-back Function	6
5.4 Reading in Received Data	6
5.5 Writing Data	7
5.6 Closing the Devices	7
5.7 Obtaining the Current Host and Firmware Version Number	7
5.8 HSS8 Built-in Tests (BITs)	7
5.9 Enable / Disable Power-On-Self Tests	8
5.10 Return POST Status	8
5.11 Return Adapter Type	8
6. HSS8 Linux Software Driver Interface	10
6.1 HSS8 Linux Software Driver System Calls	10
6.1.1 Open System Call	10
6.1.2 Close System Call	11
6.1.3 Read System Call	11
6.1.4 Write System Call	12
6.1.5 ioctl System Call	13
6.2 HSS8 BIT Data Structures	14
6.3 Protocol Data Structures	15
6.3.1 UART Mode	16
6.3.1.1 UART Protocol Information Structure	16
6.3.1.2 UART Protocol Information Structure Members	17
6.3.2 HDLC Mode	20
6.3.2.1 HDLC Protocol Information Structure	20
6.3.2.2 HDLC Protocol Information Structure Members	21
6.3.2.3 Preamble Requirements	23
6.3.3 BISYNC Mode	24
6.3.3.1 BISYNC Protocol Information Structure	24
6.3.3.2 BISYNC Protocol Information Structure Members	25
6.3.4 SMC UART Mode	29
6.3.4.1 SMC UART Protocol Information Structure	29
6.3.4.2 SMC UART Protocol Information Structure Members	30
7. Getting Started	31

CCII/HSS8/6-MAN/003	2009-08-22	Issue 1.2
CH8MAN03.WPD		Page iv of vii

8.	Contact Details	32
8.1	Contact Person	32
8.2	Physical Address	32
8.3	Postal Address	32
8.4	Voice and Electronic Contacts	32
8.5	Product Support	32
1.	Scope	1
1.1	Identification	1
1.2	System Overview	1
1.3	Document Overview	1
2.	Applicable and Reference Documents	2
2.1	Applicable Documents	2
2.2	Reference Documents	2
3.	HSS8 Linux Software Driver Distribution	3
4.	Installation Procedure	4
4.1	Compiling the HSS8 Linux Software Driver Module	4
4.2	Loading the HSS8 Linux Software Driver	4
5.	Using the HSS8 Linux Software Driver	5
5.1	Opening of Devices	5
5.2	Configuring the Channels	5
5.3	Adding Receive Call-back Function	6
5.4	Reading in Received Data	6
5.5	Writing Data	7
5.6	Closing the Devices	7
5.7	Obtaining the Current Host and Firmware Version Number	7
5.8	HSS8 Built-in Tests (BITs)	7
5.9	Enable / Disable Power-On-Self Tests	8
5.10	Return POST Status	8
5.11	Return Adapter Type	8
6.	HSS8 Linux Software Driver Interface	10
6.1	HSS8 Linux Software Driver System Calls	10
6.1.1	Open System Call	10
6.1.2	Close System Call	11
6.1.3	Read System Call	11
6.1.4	Write System Call	12
6.1.5	Ioctl System Call	13
6.2	HSS8 BIT Data Structures	14
6.3	Protocol Data Structures	15
6.3.1	UART Mode	16
6.3.1.1	UART Protocol Information Structure	16
6.3.1.2	UART Protocol Information Structure Members	17
6.3.2	HDLC Mode	20
6.3.2.1	HDLC Protocol Information Structure	20
6.3.2.2	HDLC Protocol Information Structure Members	21
6.3.2.3	Preamble Requirements	23
6.3.3	BISYNC Mode	24
6.3.3.1	BISYNC Protocol Information Structure	24
6.3.3.2	BISYNC Protocol Information Structure Members	25
6.3.4	SMC UART Mode	29
6.3.4.1	SMC UART Protocol Information Structure	29

6.3.4.2	SMC UART Protocol Information Structure Members	30
7.	Getting Started	31
8.	Contact Details	32
8.1	Contact Person	32
8.2	Physical Address	32
8.3	Postal Address	32
8.4	Voice and Electronic Contacts	32
8.5	Product Support	32

CCII/HSS8/6-MAN/003	2009-08-22	Issue 1.2
CH8MAN03.WPD		Page vi of vii

Abbreviations and Acronyms

API	Application Program Interface
BCS	Block Check Sequence
BISYNC	Binary Synchronous Communication
BIT	Built-in Test
bit/s	bits per second
BRG	Baud Rate Generator
CD	Carrier Detect
CRC	Cyclic Redundancy Check
CTS	Clear to Send
DLE	Data Link Escape
DPLL	Digital Phase-Locked Loop
EEPROM	Electrically Erasable Programmable Read Only Memory
FIFO	First In First Out
HDLC	High Level Data Link Control
HSS4NG	4-Channel High-Speed Serial Adapter
HSS8	8-Channel High-Speed Serial
I/O	Input / Output
LED	Light Emitting Diode
MHz	MegaHertz
NRZ	Non-Return-to-Zero
NRZI	Non-Return-to-Zero-Inverted
POST	Power-On-Self Test
RAM	Random Access Memory
RTS	Request to Send
RxD	Receive Data
SCC	Serial Communications Controller
SDLC	Synchronous Data Link control
SMC	Serial Management Controller
SYNC	Synchronisation
TxD	Transmit Data
UART	Universal Asynchronous Receiver/Transmitter

1. **Scope**

1.1 Identification

This document is the user manual for the HSS8 Linux Software Driver for the C²I² Systems 8-channel High-Speed Serial (HSS8) Adapter and the 4-Channel High-Speed Serial Adapter (HSS4NG). The HSS4NG is based on a stripped down HSS8 Adapter and as such this manual applies, except that only SCC channels 0 - 3 and SMC channels 8 - 9 will be available.

1.2 System Overview

The HSS8 Adapter provides eight channels of simultaneous, high-speed, bi-directional serial communications and an additional four channels of lower-speed serial communications. The eight high-speed channels are jumper configurable (on a per channel basis) for RS-232 or RS-422/485 drivers while the lower-speed channels have RS-232 drivers only.

The HSS8 Linux Software Driver is a low level, device-dependent interface for transferring data over a C²I² Systems HSS8 Adapter. The HSS8 Linux Software Driver binaries are provided with explicit installation instructions.

1.3 Document Overview

This document gives an overview of the HSS8 Linux Software Driver installation procedure and its Software Driver Interface.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 1 of 32

2. **Applicable and Reference Documents**

2.1 Applicable Documents

2.1.1 *MPC8260 PowerQUICC II Family Reference Manual, MPC8260UM/D, rev. 1, dated May 2003.*

2.1.2 *CCII/HSS8/6-MAN/001, Hardware Reference Manual for the 4-Channel New Generation and 8-Channel High-Speed Serial I/O Adapters.*

2.2 Reference Documents

None.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 2 of 32

3. HSS8 Linux Software Driver Distribution

The HSS8 Linux Software Driver software distribution consists of (at least) the following files :

ccHss8LnxSrcV<version>.tar.gz	HSS8 Linux Software Driver source code. <version> - Software version is a 3 digit integer : <ul style="list-style-type: none">• 1st digit : version number• 2nd digit : revision number• 3rd digit : beta number
ccHss8EmbV<version>.hex	HSS8 firmware. <version> - Software version is a 3 digit integer : <ul style="list-style-type: none">• 1st digit : version number• 2nd digit : revision number• 3rd digit : beta number
flashprog	Flash update utility.
hss8Readme.txt	General information and installation notes.
h s s 8 R e l e a s e _ e m b . t x t , hss8Release_linux.txt	Release notes and revision history : Please check this file for information on the latest updates.
ccHss8Test.c	Sample C code for accessing the HSS8 Linux Software Driver.
hss8Flash.txt	Procedure for updating the firmware if required.
hss8Test.txt	Test procedure for verifying HSS8 Linux Software Driver and firmware.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 3 of 32

4. Installation Procedure

This paragraph describes the installation procedure for the HSS8 Linux Software Driver.

4.1 Compiling the HSS8 Linux Software Driver Module

Unpack the HSS8 Linux Software Driver.source file using : `tar -xvzf ccHss8LnxSrcV<version>.tar.gz`. A directory named 'hss8' will be created. Change to '`hss8/lnx/builds/host/linux`' to build the HSS8 Linux Software Driver module by typing the following commands :

```
make clean
make all
```

Note : The HSS8 Linux Software Driver is only supported on Linux kernel versions 2.6 and upwards.

4.2 Loading the HSS8 Linux Software Driver

Within the '`hss8/lnx/builds/host/linux`' directory are 3 script files to help load the HSS8 Linux Software Driver. The HSS8 Linux Software Driver may be loaded in two ways :

- Using script files (`hss8_load/hss8_unload`), which can be invoked from the system's `rc.local` file or be called manually whenever the module is needed.
- Using an init script (`hss8_init`), to be placed in the directory the Linux distribution uses to load init scripts, i.e. `/etc/init.d` or `/etc/rc.d/init.d`. The HSS8 Linux Software Driver module should be located in the module directory of the kernel : `/lib/modules/[kernel version]/kernel/drivers/misc`.

The HSS8 Linux Software Driver supports up to four HSS8 Adapters on one host system. The script files will detect all HSS8 Adapters present and setup all devices. All HSS8 devices are created in `/dev` and have the following naming convention :

<code>hss8_<X>_<Y></code>	X	- [A - D] indicating which HSS8 Adapter this device belongs to.
	Y	- [0 - 11] indicating the channel number of the HSS8 Adapter.

The file `/proc/devices` lists each HSS8 Adapter and its corresponding major number under the character devices section. Each devices minor number corresponds to the channel number of the HSS8 Adapter.

Note : In order to load the HSS8 Linux Software Driver, the user must have `root` privileges.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 4 of 32

5. Using the HSS8 Linux Software Driver

The HSS8 Linux Software Driver is a character driver. Each channel on the HSS8 Adapter is available as a separate device on Linux and can be accessed with the following file-handling system calls :

- `open` - open the device (or corresponding channel on the HSS8 Adapter) for reading and writing.
- `close` - close the device (or corresponding channel on the HSS8 Adapter) for reading and writing.
- `read` - read from the device (or receive data on the specific channel on the HSS8 Adapter).
- `write` - write to the device (or send data on the specific channel on the HSS8 Adapter).
- `ioctl` - setup the various protocols (UART, HDLC, BISYNC).

5.1 Opening of Devices

Before any device may be accessed, it must be opened with the `open` system call. The `open` system call returns a file descriptor, which is used as a handle to the device for subsequent accesses.

The HSS8 Linux Software Driver allows only one instance of the device to be open at any time. Hence subsequent `open` calls will return an error. The user application should share the file descriptor between processes to access the device at any time.

Example : For device `/dev/hss8_A_0` :

```
fd = open("/dev/hss8_A_0", O_RDWR);
if(fd < 0)
{
    printf("Error opening device: %s - %s\n", "/dev/hss8_A_", strerror(errno));
    return 1;
}
```

5.2 Configuring the Channels

The HSS8 Adapter has eight Serial Communications Controllers (SCCs) [Channels A - H] that support UART, HDLC/SDLC and BISYNC protocols, and four Serial Management Controllers (SMC's) [Channels I - L] that support only asynchronous UART. Devices `hss8_[A - D]_[0 - 7]` correspond to Channels A - H and devices `hss8_[A - D]_[8 - 11]` to Channels I - L.

After a HSS8 device has been opened, the user must first set the default configuration for each of the channels. To set the configuration of a channel, a protocol-specific information structure is used. Examples of the required structure is given in `ccHss8Test.c` (for the UART protocol) and can be used as a starting point.

The structures allow the user to set all the protocol-specific options available on the HSS8 communication controller chip (the MPC8260 PowerQUICC II™). For available options for each of the structure fields, see [2.1.1].

The `ioctl` system call is used to feed the protocol specific structure to the HSS8 Linux Software Driver.

Example : Set device with file descriptor `fd` to UART mode :

```
/* Set initial SCC port configuration */
ioctl(fd, HSS8_IOC_SET_PORT_CONFIG, &uart_info);
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 5 of 32

5.3 Adding Receive Call-back Function

The HSS8 Linux Software Driver is able to notify the user if data is available to read. This is accomplished with asynchronous notification and is enabled as follows :

- The user program needs to specify a process as the owner of the device. This is necessary so that the kernel knows which process to notify of an event.
-
- For the Call-back function to determine the file descriptor that caused this signal, the user program must set the SIGIO flag in the device by means of the `F_SETSIG` *fcntl* command.
-
- To actually enable asynchronous notification, the user program must set the FASYNC flag in the device by means of the `F_SETFL` *fcntl* command.

The above steps are implemented in software as follows :

```
#include <fcntl.h>

/* setup this process as the owner of the file descriptor */
fcntl(fd, F_SETOWN, getpid());

/* set the SIGIO signal */
fcntl(fd, F_SETSIG, SIGIO);

/* setup async notification */
fcntl(fd, F_SETFL, fcntl(fd, F_GETFL) | FASYNC);
```

The Call-back function may be setup as follows :

```
#include <signal.h>

void hss8Test_rx_callback(int signo, siginfo_t *siginfo, void *what)
{
    /* read data */
    read(siginfo->si_fd, rx_data, 10);
}

...

...

struct sigaction action;

/* setup rx callback */
memset(&action, 0, sizeof(action));
action.sa_sigaction = hss8Test_rx_callback;
action.sa_flags = SA_SIGINFO | SA_NOMASK;

sigaction(SIGIO, &action, NULL);
```

Note : For more information on the *sigaction* system call, consult its man page.

5.4 Reading in Received Data

The *read* system call will return the number of bytes received on the specific channel of the HSS8 Adapter. If less data is available than the application requested, this amount will be returned immediately.

If no data is present, the *read* system call will block by default until at least one byte is there. If the flag `O_NONBLOCK` has been specified and no data is present, the *read* system call will return immediately with a return value of `-EAGAIN`.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 6 of 32

Example : Read 10 bytes from device with file descriptor *fd* :

```
unsigned char rx_data[10];
read(fd, rx_data, 10);
```

5.5 Writing Data

The *write* system call writes data to be send on the specific channel of the HSS8 Adapter. The return value, if the call was successful, is the number of bytes written.

Blocking is not supported with the *write* system call. If the specific channel of the HSS8 Adapter cannot accept anymore data, the *write* system call will return immediately with a return value of -EBUSY.

Example : Write 4 bytes to device with file descriptor *fd* :

```
unsigned char tx_data[4] = {0xAA, 0xBB, 0xCC, 0xDD};
write(fd, tx_data, 4);
```

5.6 Closing the Devices

Devices are closed with the *close* system call. Once closed, the corresponding channel of the device will reject all incoming data. This data will not be available once the device is re-opened.

5.7 Obtaining the Current Host and Firmware Version Number

The HSS8 Linux Software Driver, engine version and the firmware version may be obtained with the *ioctl* system call. This information is available on all devices per HSS8 Adapter.

```
char host_string[HSS8_VERSION_STRING_LENGTH] = {0};
char engine_string[HSS8_VERSION_STRING_LENGTH] = {0};
char firmware_string[HSS8_VERSION_STRING_LENGTH] = {0};

status = ioctl(fd, HSS8_IOC_ENGINE_VERSION_GET, engine_string);
if(status != 0)
{
    printf("Could not get current engine version.\n");
}

status = ioctl(fd, HSS8_IOC_EMBEDDED_VERSION_GET, firmware_string);
if(status != 0)
{
    printf("Could not get current firmware version.\n");
}

status = ioctl(fd, HSS8_IOC_HOST_VERSION_GET, host_string);
if(status != 0)
{
    printf("Could not get current host version.\n");
}

printf("Current driver:   V%s\n", host_string);
printf("Current engine:  V%s\n", engine_string);
printf("Current firmware: V%s\n\n", firmware_string);
```

5.8 HSS8 Built-in Tests (BITs)

The structure *hss8BitInfo* defined in *hss8Controllfc.h* stores each channel's statistics : e.g. how many bytes / packets have been accepted / rejected / sent / received and how many errors were reported. The *ioctl* system call fills in the structure with the latest data and returns it to the user application. This information is available on all devices per HSS8 Adapter.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 7 of 32

Example : Obtaining each channel's statistics :

```
hss8BitInfo bit_info;
ioctl(fd, HSS8_IOC_BIT_GET, &bit_info);
```

To clear the counters on the HSS8 Adapter, use the following *ioctl* command :

```
ioctl(fd, HSS8_IOC_BIT_CLEAR);
```

5.9 Enable / Disable Power-On-Self Tests

Various Power-On-Self Tests (POSTs) may be enabled/disabled via the *ioctl* system call. The following macros (see *hss8Controllfc.h*) define the tests :

- HSS8_POST_RAM_DATA_ENABLE - Test the onboard RAM data bus.
- HSS8_POST_RAM_ADDR_ENABLE - Test the onboard RAM address bus.
- HSS8_POST_RAM_DEV_ENABLE - Test the onboard RAM devices.
- HSS8_POST_KERNEL_CRC_ENABLE - Test the embedded firmware CRC.

To disable all tests, specify zero.

Note : Every time the HSS8 Adapter starts up, the specified tests are run. If the user doesn't require these tests anymore, they need to be disabled again. By default, no tests are specified.

Example : Enable all POST tests :

```
char post_tests = HSS8_POST_RAM_DATA_ENABLE | HSS8_POST_RAM_ADDR_ENABLE |
HSS8_POST_RAM_DEV_ENABLE | HSS8_POST_KERNEL_CRC_ENABLE;

ioctl(fd, HSS8_IOC_POST_ENABLE, &post_tests);
```

5.10 Return POST Status

The POST status may be obtained via the *ioctl* system call. The following macros (see *hss8Controllfc.h*) define the status :

- HSS8_OK - All tests passed.
- HSS8_EEPROM_UPDATE - EEPROM was corrupt and was reprogrammed.
- HSS8_EEPROM_ERROR - EEPROM read / write error.
- HSS8_RAM_DATA_ERROR - RAM databus error.
- HSS8_RAM_ADDR_ERROR - RAM addressbus error.
- HSS8_RAM_DEVICE_ERROR - RAM device error.
- HSS8_FLASH_MAGIC_ERROR - Flash magic number corrupt.
- HSS8_FLASH_KERNEL_CRC_ERROR - Flash CRC error.
- HSS8_SLAVE_PowerQUICC_II_FAIL - Second PowerQUICC II processor failed to start up.

Example : Get POST status :

```
char post_status = 0;

ioctl(fd, HSS8_IOC_POST_STATUS, &post_status);
```

5.11 Return Adapter Type

The adapter type may be obtained via the *ioctl* system call. The return value will be either 4 or 8, describing a 4-channel (four SCCs and two SMCs available) or 8-channel (eight SCCs and four SMCs available) adapter. When a 4-channel adapter is present, only the following devices are valid : *hss8_[A - D]_[0 - 3]* (four SCC channels) and *hss8_[A - D]_[8 - 9]* (two SMC ports). All other devices, although visible in */dev*, will return an error (-ENODEV) when accessed.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 8 of 32

Example : Get adapter type :

```
char adapter_type = 0;  
ioctl(fd, HSS8_IOC_ADAPTER_TYPE, &adapter_type);
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 9 of 32

6. HSS8 Linux Software Driver Interface

The HSS8 Linux Software Driver source contains the following header files (in 'hss8/lnx/src/h'), which should always be included in user applications :

- hss8LnxDriver.h - IOCTL command definitions.
- hss8Defs.h - HSS8 type definitions.
- hss8HostDriver.h - Of only importance for the HSS8 Linux Software Driver are the defines of the HSS8 adapter. The function declarations may be ignored, as they are not applicable to the HSS8 Linux Software Driver.
- hss8Controllfc.h - Definition of structures and types for all protocols available on the HSS8 Adapter.
- other header files - Other header files are only used to compile the software driver module and are not necessary for user applications.

6.1 HSS8 Linux Software Driver System Calls

6.1.1 Open System Call

Function : **open**

Purpose : Open the HSS8 device (or port) and return a file descriptor.

Arguments :

- <pathname> - The path and name of device. Usually “/dev/hss8_X_Y”, where X = [A - D] and Y = [0 - 11].
- <flags> - Always **O_RDWR**. If no blocking is desired, specify **O_NONBLOCK** as well (bitwise-ORed with previous parameter). Do not specify **O_ASYNC** here, rather setup asynchronous notification as described in 5.3.

Returns :

- fd - File descriptor.
- 1 - Error occurred.

Errors :

- ENODEV - Incorrect device specified or device cannot be found.
- EBUSY - The device is already open or the adapter is busy.
- EINTR - The open system call was interrupted by a signal.

```
#include <sys/types.h>
#include <sys/stat.h>
#include <fcntl.h>
```

```
int open(const char *pathname, int flags);
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 10 of 32

6.1.2 Close System Call

Function : **close**

Purpose : Close the HSS8 device (or port) and release the file descriptor.

Arguments :

<fd> - The file descriptor to be closed.

Returns :

0 - On success.
-1 - Error occurred.

Errors :

-EBADF - Incorrect file descriptor specified.
-ENODEV - Incorrect device specified or device cannot be found.
-EBUSY - The adapter is busy.
-EINTR - The close system call was interrupted by a signal.

```
#include <unistd.h>
```

```
int close(int fd);
```

6.1.3 Read System Call

Function : **read**

Purpose : Read from device (or read in received data from port).

Arguments :

<fd> - File descriptor to read from.
<buf> - Buffer to read bytes into.
<count> - Number of bytes to read from device.

Returns :

num_bytes - Number of bytes read. This may be less than the bytes requested, which is not an error. If zero, there are no bytes to read at present.
-1 - Error occurred.

Errors :

-EBADF - Incorrect file descriptor specified.
-EFAULT - There was a problem copying data into the user specified buffer.
-EAGAIN - Non blocking has been specified and no data was immediately available for reading.
-EINTR - The close system call was interrupted by a signal.

```
#include <unistd.h>
```

```
ssize_t read(int fd, void *buf, size_t count);
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 11 of 32

6.1.4 Write System Call

Function : **write**

Purpose : Write to device (or send data on specific port).

Arguments :

<fd> - File descriptor to write to.
<buf> - Buffer containing the data to be written to device.
<count> - Number of bytes to write to device. May only be up to a maximum of 32 kBytes.

Returns :

num_bytes - Number of bytes written. If zero, no bytes have been written.
-1 - Error occurred.

Errors :

-EBADF - Incorrect file descriptor specified.
-ENODEV - Incorrect device specified or device cannot be found.
-EINVAL - The maximum number of bytes to be written has been exceeded.
-EFAULT - There was a problem copying data from the user specified buffer.
-EINTR - The close system call was interrupted by a signal.

```
#include <unistd.h>
```

```
ssize_t write(int fd, const void *buf, size_t count);
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 12 of 32

6.1.5 ioctl System Call

Function : **ioctl**

Purpose : Configure the protocol of the device or obtain device specific information.

Arguments :

- <fd> - File descriptor to configure.
- <request> - Command to be performed. One of :
 1. HSS8_IOC_SET_PORT_CONFIG
 2. HSS8_IOC_GET_PORT_CONFIG
 3. HSS8_IOC_BIT_CLEAR
 4. HSS8_IOC_BIT_GET
 5. HSS8_IOC_ENGINE_VERSION_GET
 6. HSS8_IOC_EMBEDDED_VERSION_GET
 7. HSS8_IOC_HOST_VERSION_GET
 8. HSS8_IOC_POST_ENABLE
 9. HSS8_IOC_POST_STATUS
 10. HSS8_IOC_ADAPTER_TYPE

- <...> - Command specific argument :
 1. Initialised hss8ProtocolInfo structure.
 2. Cleared hss8ProtocolInfo structure.
 3. No argument.
 4. Cleared hss8BitInfo structure.
 5. char buffer.
 6. char buffer.
 7. char buffer.
 8. char variable.
 9. char variable.
 10. char variable.

Returns :

- 0 - On success.
- 1 - Error occurred.

Errors :

- EBADF - Incorrect file descriptor specified.
- ENODEV - Incorrect device specified or device cannot be found.
- EINVAL - Incorrect protocol specified for specific device or port.
- EFAULT - The command specific argument references an inaccessible memory area.
- ENOTTY - The specified request does not exist.
- ENOMEM - Internal temporary kernel memory allocation failed.
- EBUSY - HSS8 Adapter may be busy.

```
#include <sys/ioctl.h>
```

```
int ioctl(int fd, int request, ...);
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 13 of 32

6.2 HSS8 BIT Data Structures

The following structures define the HSS8 BIT variables (defined in *hss8Controllfc.h*) :

BIT Structures :

```
struct hss8BoardBitInfoStruct
{
    hss8UINT32 board_number;
    hss8UINT32 firmware_version;
    hss8UINT32 firmware_revision;
    hss8UINT32 firmware_beta;
    char firmware_creation_date[30];
};
typedef struct hss8BoardBitInfoStruct hss8BoardBitInfo;

struct hss8SendBitInfoStruct
{
    hss8Count nr_accepted;
    hss8Count nr_rejected;
    hss8Count nr_errors;
    hss8Count nr_sent;
    hss8Count nr_bytes_accepted;
    hss8Count nr_bytes_rejected;
    hss8Count nr_bytes_sent;
};
typedef struct hss8SendBitInfoStruct hss8SendBitInfo;

struct hss8ReceiveBitInfoStruct
{
    hss8Count nr_buffers_busy;
    hss8Count nr_received;
    hss8Count nr_bytes_received;
    hss8Count nr_errors;
};
typedef struct hss8ReceiveBitInfoStruct hss8ReceiveBitInfo;
```

Main BIT Structure :

```
struct hss8BitInfoStruct
{
    hss8BoardBitInfo board_bit;
    hss8SendBitInfo tx_scc_bit[HSS8_HW_NR_SCC];
    hss8ReceiveBitInfo rx_scc_bit[HSS8_HW_NR_SCC];
    hss8SendBitInfo tx_smc_bit[HSS8_HW_NR_SMC];
    hss8ReceiveBitInfo rx_smc_bit[HSS8_HW_NR_SMC];
};
typedef struct hss8BitInfoStruct hss8BitInfo;
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 14 of 32

6.3 Protocol Data Structures

Each protocol defines a protocol information structure used to configure a port with protocol specific options. This paragraph details the information structures used by each protocol and explains the use and limitations of every structure member.

hss8ProtocolInfo structure :

```
struct hss8ProtocolInfoStruct
{
    hss8UINT32 protocol_id;

    union
    {
        /* SCC info */
        hss8UartInfo uart;
        hss8HdlcInfo hdlc;
        hss8BisyncInfo bisync;

        /* SMC info */
        hss8SmcUartInfo smc_uart;
    } info;
};
typedef struct hss8ProtocolInfoStruct hss8ProtocolInfo;
```

protocol_id :

```
HSS8_PROTOCOL_UART
HSS8_PROTOCOL_HDLC
HSS8_PROTOCOL_BISYNC
HSS8_PROTOCOL_SMC_UART
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 15 of 32

6.3.1 UART Mode

This protocol may only be used with the eight SCC ports : Ports A - H.

6.3.1.1 UART Protocol Information Structure

The following structure is defined in the file *hss8Controllfc.h* and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in *hss8Controllfc.h*.

```
struct hss8UartInfoStruct
{
    hss8UINT32 baud_rate;
    hss8UINT32 flow_control;
    hss8UINT32 stop_bits;
    hss8UINT32 data_bits;
    hss8UINT32 uart_mode;
    hss8UINT32 freeze_tx;
    hss8UINT32 rx_zero_stop_bits;
    hss8UINT32 sync_mode;
    hss8UINT32 disable_rx_while_tx;
    hss8UINT32 parity_enable;
    hss8UINT32 rx_parity;
    hss8UINT32 tx_parity;
    hss8UINT32 diag_mode;
    hss8UINT32 max_receive_bytes;
    hss8UINT32 max_idl;
    hss8UINT32 brkcr;
    hss8UINT32 parec;
    hss8UINT32 frmec;
    hss8UINT32 nosec;
    hss8UINT32 brkec;
    hss8UINT32 uaddr1;
    hss8UINT32 uaddr2;
    hss8UINT32 toseq;
    hss8UINT32 cc[8];
    hss8UINT32 rccm;
    hss8UINT32 clock_source;
};
typedef struct hss8UartInfoStruct hss8UartInfo;
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 16 of 32

6.3.1.2 UART Protocol Information Structure Members

Name	Options	Description	
baud_rate	<p>1 200 - 1 Mbit/s (RS-232) 1 200 - 16 Mbit/s (RS-422/485)</p> <p>Any values permissible.</p> <p>The equation to calculate the actual baud rate for asynchronous UART is as follows :</p> $\text{Actual baud rate} = 100 \text{ MHz} / 16 / \text{ROUND}(100 \text{ MHz} / 16 / \text{Desired baud rate})$ <p>The equation to calculate the actual baud rate for synchronous UART is as follows :</p> $\text{Actual baud rate} = 100 \text{ MHz} / \text{ROUND}(100 \text{ MHz} / \text{Desired baud rate})$ <p>Where ROUND() implies that the result is rounded to the nearest integer.</p>	<p>Used to specify a single baud rate for both transmitter and receiver.</p> <p>Units in bit/s.</p>	
clock_source	HSS8_CLOCK_DEFAULT	<p>HSS8_CLOCK_DEFAULT connects Baud Rate Generators (BRGs) [1 - 4] to Channels [A - D] and Channels [E - H].</p> <p>For synchronous UART : When transmit clock is set to HSS8_CLOCK_BRG[1 - 4], then receive clock is still set to HSS8_CLOCK_EXT[1 - 4] for Channels [A - D] and [E - H].</p> <p>For asynchronous UART : Transmit and receive clocks can be set to one of HSS8_CLOCK_BRG[1 - 4] or HSS8_CLOCK_EXT[1 - 4].</p> <p>Note : There are four BRGs and four clock input pins per PowerQUICC II processor.</p>	
	<p>HSS8_CLOCK_BRG1 HSS8_CLOCK_BRG2 HSS8_CLOCK_BRG3 HSS8_CLOCK_BRG4</p>		<p>BRGs [1-4]. BRG1 for Channels [A and E] BRG2 for Channels [B and F] BRG3 for Channels [C and G] BRG4 for Channels [D and H]</p>
	<p>HSS8_CLOCK_EXT1 HSS8_CLOCK_EXT2 HSS8_CLOCK_EXT3 HSS8_CLOCK_EXT4</p>		<p>External Clocks connected on CLK_IN Pins.</p> <p>Note : HSS8_CLOCK_EXT[1-2] can only be used for Channel [A and B] and [E and F], while HSS8_CLOCK_EXT[3-4] can only be used for Channels [C and D] and [G and H].</p>
flow_control	<p>HSS8_UART_FLOW_NORMAL HSS8_UART_FLOW_ASYNC</p>	Normal or asynchronous flow control.	
stop_bits	<p>HSS8_UART_STOP_BITS_ONE HSS8_UART_STOP_BITS_TWO</p>	Number of full stop bits.	
data_bits	<p>HSS8_UART_DATA_BITS_5 HSS8_UART_DATA_BITS_6 HSS8_UART_DATA_BITS_7 HSS8_UART_DATA_BITS_8 HSS8_UART_DATA_BITS_9 HSS8_UART_DATA_BITS_10 HSS8_UART_DATA_BITS_11 HSS8_UART_DATA_BITS_12 HSS8_UART_DATA_BITS_13 HSS8_UART_DATA_BITS_14</p>	Number of data bits. Note only channels [I - L] (i.e. the SMC channels) support nine or more data bits.	
uart_mode	<p>HSS8_UART_MODE_NORMAL HSS8_UART_MODE_MAN_MM HSS8_UART_MODE_AUTO_MM</p>	Select UART mode : normal, manual multidrop or automatic multidrop mode.	

Name	Options		Description
freeze_tx	HSS8_UART_FREEZE_TX_NORMAL HSS8_UART_FREEZE_TX_FREEZE		Pause (freeze) transmission. Transmission continues when set back to normal.
rx_zero_stop_bits	HSS8_UART_RX_ZERO_STOP_BITS_NORMAL HSS8_UART_RX_ZERO_STOP_BITS_NONE		If set to none, the receiver receives data without stop bits.
sync_mode	HSS8_UART_SYNC_MODE_ASYNC HSS8_UART_SYNC_MODE_SYNC		Select asynchronous (normal) or synchronous mode.
disable_rx_while_tx	HSS8_UART_DISABLE_RX_WHILE_TX_NORMAL HSS8_UART_DISABLE_RX_WHILE_TX_DISABLE		Enable (normal) or disable receiver while transmitting. Used in multidrop mode to prevent reception of own messages.
parity_enable	HSS8_UART_PARITY_NO_PARITY HSS8_UART_PARITY_ENABLE		Enable or disable parity checking.
rx_parity, tx_parity	HSS8_UART_PARITY_ODD HSS8_UART_PARITY_LOW HSS8_UART_PARITY_EVEN HSS8_UART_PARITY_HIGH		Receive and transmit parity. Parity will only be checked if parity is enabled.
diag_mode	HSS8_DIAG_NORMAL	Normal operation. Use this for external loopback .	Set diagnostic mode. External loopback - RS-422/485 : Connect TxD+ to RxD+, TxD- to RxD-, (CLK_OUT+ to CLK_IN+ and CLK_OUT- to CLK_IN- for synchronous mode). External loopback - RS-232 : Connect TxD to RxD, (CLK_OUT to CLK_IN for synchronous mode) and RTS to CTS and CD.
	HSS8_DIAG_LOOPBACK	Internal loopback : TxD and RxD are connected internally. The value on RxD, CTS and CD is ignored. The transmitter and receiver share the same clock source.	
	HSS8_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS8_DIAG_LOOPBACK_EC HO	Loopback and echo operation occur simultaneously.	
max_receive_bytes	1 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(..)).		Maximum number of bytes that may be copied into a buffer.
max_idl	0 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(..)).		Maximum idle characters. When a character is received, the receiver begins counting idle characters. If max_idl idle characters are received before the next data character, an idle timeout occurs and the buffer is closed. Thus, max_idl offers a way to demarcate frames. To disable the feature, clear max_idl. The bit length of an idle character is calculated as follows : 1 + data length (5-9) + 1 (if parity is used) + number of stop bits (1-2). For 8 data bits, no parity, and 1 stop bit, the character length is 10 bits.
brkcr	0 - 2 048		Number of break characters sent by transmitter. For 8 data bits, no parity, 1 stop bit, and 1 start bit, each break character consists of 10 zero bits.
parec	0 - 65 535		Number of received parity errors.

Name	Options	Description
frmec	0 - 65 535	Number of received characters with framing errors.
nosec	0 - 65 535	Number of received characters with noise errors.
brkec	0 - 65 535	Number of break conditions on the signal.
uaddr1, uaddr2	0x0000 - 0x00FF	Address in multidrop mode. Only the lower 8 bits are used so the upper 8 bits should be cleared.
toseq	0x0000 - 0x00FF	Transmit out of sequence character (e.g. XON, XOFF).
cc[8]	0b00-----cccccccc - Valid entry. 0b10-----cccccccc - Cntry not valid and is not used.	Control character 1 to 8. These characters can be used to delimit received messages. ----- (6 bits) - Reserved. Initialise to zero. cccccccc (8 bits) - Defines control characters to be compared to the incoming character.
rccm	0b11-----00000000 - Ignore these bits when comparing incoming character. 0b11-----11111111 - Enable comparing the incoming character to cc[n].	Receive control character mask. A one enables comparison and a zero masks it.

6.3.2 HDLC Mode

This protocol may only be used with the eight SCC ports : Ports A - H.

6.3.2.1 HDLC Protocol Information Structure

The following structure is defined in the file *hss8Controllfc.h* and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in *hss8Controllfc.h*.

```
struct hss8HdlcInfoStruct
{
    hss8UINT32 baud_rate;
    hss8UINT32 crc_mode;
    hss8UINT32 diag_mode;
    hss8UINT32 max_receive_bytes;
    hss8UINT32 max_frame_bytes;
    hss8UINT32 address_mask;
    hss8UINT32 address1;
    hss8UINT32 address2;
    hss8UINT32 address3;
    hss8UINT32 address4;
    hss8UINT32 nr_flags_between_frames;
    hss8UINT32 retransmit_enabled;
    hss8UINT32 flag_sharing_enabled;
    hss8UINT32 rx_disabled_during_tx;
    hss8UINT32 bus_mode;
    hss8UINT32 bus_mode_rts;
    hss8UINT32 multiple_tx_frames;
    hss8UINT32 encoding_method;
    hss8UINT32 preamble_length;
    hss8UINT32 preamble_pattern;
    hss8UINT32 send_idles_or_flags;
    hss8UINT32 clock_source;
};
typedef struct hss8HdlcInfoStruct hss8HdlcInfo;
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 20 of 32

6.3.2.2 HDLC Protocol Information Structure Members

Name	Options		Description
baud_rate	<p>1 200 - 1 Mbit/s (RS-232) 1 200 - 16 Mbit/s (RS-422/485)</p> <p>Any values permissible.</p> <p>The equation to calculate the actual baud rate for FM0/1, Manchester and Diff. Manchester is as follows :</p> $\text{Actual baud rate} = 100 \text{ MHz} / 16 / \text{ROUND}(100 \text{ MHz} / 16 / \text{Desired baud rate})$ <p>The equation to calculate the actual baud rate for NRZ/NRZI is as follows :</p> $\text{Actual baud rate} = 100 \text{ MHz} / \text{ROUND}(100 \text{ MHz} / \text{Desired baud rate})$ <p>Where ROUND() implies that the result is rounded to the nearest integer.</p>		<p>Used to specify a single baud rate for both transmitter and receiver.</p> <p>Units in bit/s.</p>
clock_source	HSS8_CLOCK_DEFAULT		<p>HSS8_CLOCK_DEFAULT connects BRGs [1 - 4] to Channels [A - D] and Channels [E - H].</p> <p>For NRZ/NRZI : When transmit clock is set to HSS8_CLOCK_BRG[1 - 4], then receive clock is still set to HSS8_CLOCK_EXT[1 - 4] for Channels [A - D] and [E - H].</p> <p>For FM0/1, Manchester and Diff. Manchester : Transmit and receive clocks can be set to one of HSS8_CLOCK_BRG[1 - 4] or HSS8_CLOCK_EXT[1 - 4].</p> <p>Note : There are four BRGs and four clock input pins per PowerQUICC II processor.</p>
	HSS8_CLOCK_BRG1 HSS8_CLOCK_BRG2 HSS8_CLOCK_BRG3 HSS8_CLOCK_BRG4	BRGs [1-4]. BRG1 for Channels [A and E] BRG2 for Channels [B and F] BRG3 for Channels [C and G] BRG4 for Channels [D and H]	
	HSS8_CLOCK_EXT1 HSS8_CLOCK_EXT2 HSS8_CLOCK_EXT3 HSS8_CLOCK_EXT4	External Clocks connected on CLK_IN Pins. Note : HSS8_CLOCK_EXT[1 - 2] can only be used for Channels [A and B] and [E and F], while HSS8_CLOCK_EXT[3 - 4] can only be used for Channels [C and D] and [G and H].	
crc_mode	HSS8_HDLC_CRC_MODE_16_BIT HSS8_HDLC_CRC_MODE_32_BIT		HDLC CRC mode.
diag_mode	HSS8_DIAG_NORMAL	Normal operation. Use this for external loopback .	Set diagnostic mode. External loopback - RS-422/485 : Connect TxD+ to RxD+, TxD- to RxD-, (CLK_OUT+ to CLK_IN+ and CLK_OUT- to CLK_IN- for synchronous mode). External loopback - RS-232 : Connect TxD to RxD, (CLK_OUT to CLK_IN for synchronous mode) and RTS to CTS and CD. Set diagnostic mode. For synchronous mode : see encoding_method .

Name	Options		Description
	HSS8_DIAG_LOOPBACK	Internal loopback : TxD and RxD are connected internally. The value on RxD, CTS and CD is ignored. The transmitter and receiver share the same clock source.	
	HSS8_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS8_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
max_receive_bytes	1 to (2 048 - CRC bytes (2 or 4)) (default) or up to (32 kBytes - CRC bytes (2 or 4)), depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(.)).		Maximum number of bytes to receive before closing buffer. Set equal to max_frame_bytes.
max_frame_bytes	1 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(.)).		Maximum number of bytes per frame. Set equal to the number of data bytes plus the number of CRC bytes (either two or four) per frame.
address_mask	0x0000 - 0xFFFF		HDLC address mask. A one enables comparison and a zero masks it.
address1, address2, address3, address4	0x0000 - 0xFFFF		Four address registers for address recognition. The SCC reads the frame address from the HDLC receiver, compares it with the address registers, and masks the result with address_mask. For example, to recognize a frame that begins 0x7E (flag), 0x68, 0xAA, using 16-bit address recognition, the address registers should contain 0xAA68 and address_mask should contain 0xFFFF. For 8-bit addresses, clear the eight high-order address bits.
nr_flags_between_frames	0 - 15		Minimum number of flags between or before frames.
retransmit_enabled	TRUE FALSE		Enable re-transmit.
flag_sharing_enabled	TRUE FALSE		Enable flag sharing.
rx_disabled_during_tx	TRUE FALSE		Disable receive during transmit.
bus_mode	TRUE FALSE		Enable bus mode.
bus_mode_rts	TRUE FALSE		Enable special RTS operation in HDLC bus mode.
multiple_tx_frames	TRUE FALSE		Enable multiple frames in transmit FIFO.

Name	Options	Description
encoding_method	HSS8_HDLC_ENCODING_METHOD_NRZ HSS8_HDLC_ENCODING_METHOD_NRZI_MARK HSS8_HDLC_ENCODING_METHOD_NRZI_SPACE HSS8_HDLC_ENCODING_METHOD_FM0 HSS8_HDLC_ENCODING_METHOD_FM1 HSS8_HDLC_ENCODING_METHOD_MANCHESTER HSS8_HDLC_ENCODING_METHOD_DIFF_MANCHESTER	RX / TX encoding method. NRZ and NRZI use no DPLL. FM0/1, Manchester and Diff_Manchester use the DPLL for clock recovery. The clock rate is 16x when the DPLL is used.
preamble_length	HSS8_DPLL_PREAMBLE_LENGTH_0 HSS8_DPLL_PREAMBLE_LENGTH_8 HSS8_DPLL_PREAMBLE_LENGTH_16 HSS8_DPLL_PREAMBLE_LENGTH_32 HSS8_DPLL_PREAMBLE_LENGTH_48 HSS8_DPLL_PREAMBLE_LENGTH_64 HSS8_DPLL_PREAMBLE_LENGTH_128	Determines the length of the preamble pattern.
preamble_pattern	HSS8_DPLL_PREAMBLE_PATTERN_00 HSS8_DPLL_PREAMBLE_PATTERN_10 HSS8_DPLL_PREAMBLE_PATTERN_01 HSS8_DPLL_PREAMBLE_PATTERN_11	Determines what bit pattern precedes each TX frame.
send_idles_or_flags	HSS8_HDLC_SEND_IDLES HSS8_HDLC_SEND_FLAGS_SYNC	Send either idles or flags/syns between frames as defined by the protocol. For HDLC the flag is defined as 0x7E. NRZI encoding methods may only be used with flags/syns.

6.3.2.3 Preamble Requirements

Decoding Method	Preamble Pattern	Minimum Preamble Length Required
NRZI Mark	All zeros	8-bit
NRZI Space	All ones	8-bit
FM0	All ones	8-bit
FM1	All zeros	8-bit
Manchester	101010...10	8-bit
Differential Manchester	All ones	8-bit

6.3.3 BISYNC Mode

This protocol may only be used with the eight SCC ports : Ports A - H.

6.3.3.1 BISYNC Protocol Information Structure

The following structure is defined in the file *hss8Controllfc.h* and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in *hss8Controllfc.h*.

```
struct hss8BisyncInfoStruct
{
    hss8UINT32 baud_rate;
    hss8UINT32 clock_source;
    hss8UINT32 max_receive_bytes;
    hss8UINT32 min_no_sync_pairs;
    hss8UINT32 crc_select;
    hss8UINT32 receive_bcs;
    hss8UINT32 rx_transparant_mode;
    hss8UINT32 reverse_data;
    hss8UINT32 disable_rx_while_tx;
    hss8UINT32 rx_parity;
    hss8UINT32 tx_parity;
    hss8UINT32 diag_mode;
    hss8UINT32 crcc;
    hss8UINT32 prcrc;
    hss8UINT32 ptcrc;
    hss8UINT32 parec;
    hss8UINT32 bsync;
    hss8UINT32 bdle;
    hss8UINT32 cc[8];
    hss8UINT32 rccm;
    hss8UINT32 sync;
    hss8UINT32 syn_length;
    hss8UINT32 send_idles_or_flags;
};
typedef struct hss8BisyncInfoStruct hss8BisyncInfo;
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 24 of 32

6.3.3.2 BISYNC Protocol Information Structure Members

Name	Options	Description						
baud_rate	1 200 - 1 Mbit/s (RS-232) 1 200 - 16 Mbit/s (RS-422/485) Any values permissible. The equation to calculate the actual baud rate for BISYNC is as follows : $\text{Actual baud rate} = 100 \text{ MHz} / \text{ROUND}(100 \text{ MHz} / \text{Desired baud rate})$ Where ROUND() implies that the result is rounded to the nearest integer.	Used to specify a single baud rate for both transmitter and receiver. Units in bit/s.						
clock_source	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2" data-bbox="474 602 1125 719">HSS8_CLOCK_DEFAULT</td> </tr> <tr> <td data-bbox="474 719 820 864"> HSS8_CLOCK_BRG1 HSS8_CLOCK_BRG2 HSS8_CLOCK_BRG3 HSS8_CLOCK_BRG4 </td> <td data-bbox="820 719 1125 864"> BRGs [1 - 4]. BRG1 for Channels [A and E] BRG2 for Channels [B and F] BRG3 for Channels [C and G] BRG4 for Channels [D and H] </td> </tr> <tr> <td data-bbox="474 864 820 1171"> HSS8_CLOCK_EXT1 HSS8_CLOCK_EXT2 HSS8_CLOCK_EXT3 HSS8_CLOCK_EXT4 </td> <td data-bbox="820 864 1125 1171"> External Clocks connected on CLK_IN Pins. Note : HSS8_CLOCK_EXT[1 - 2] can only be used for Channels [A and B] and [E and F], while HSS8_CLOCK_EXT[3 - 4] can only be used for Channels [C and D] and [G and H]. </td> </tr> </table>	HSS8_CLOCK_DEFAULT		HSS8_CLOCK_BRG1 HSS8_CLOCK_BRG2 HSS8_CLOCK_BRG3 HSS8_CLOCK_BRG4	BRGs [1 - 4]. BRG1 for Channels [A and E] BRG2 for Channels [B and F] BRG3 for Channels [C and G] BRG4 for Channels [D and H]	HSS8_CLOCK_EXT1 HSS8_CLOCK_EXT2 HSS8_CLOCK_EXT3 HSS8_CLOCK_EXT4	External Clocks connected on CLK_IN Pins. Note : HSS8_CLOCK_EXT[1 - 2] can only be used for Channels [A and B] and [E and F], while HSS8_CLOCK_EXT[3 - 4] can only be used for Channels [C and D] and [G and H].	HSS8_CLOCK_DEFAULT connects BRGs[1 - 4] to Channels [A - D] and Channels [E - H]. When transmit clock is set to HSS8_CLOCK_BRG[1 - 4], then receive clock is still set to HSS8_CLOCK_EXT[1 - 4] for Channels [A - D] and [E - H]. Note : There are four BRGs and four clock input pins per PowerQUICC II processor.
HSS8_CLOCK_DEFAULT								
HSS8_CLOCK_BRG1 HSS8_CLOCK_BRG2 HSS8_CLOCK_BRG3 HSS8_CLOCK_BRG4	BRGs [1 - 4]. BRG1 for Channels [A and E] BRG2 for Channels [B and F] BRG3 for Channels [C and G] BRG4 for Channels [D and H]							
HSS8_CLOCK_EXT1 HSS8_CLOCK_EXT2 HSS8_CLOCK_EXT3 HSS8_CLOCK_EXT4	External Clocks connected on CLK_IN Pins. Note : HSS8_CLOCK_EXT[1 - 2] can only be used for Channels [A and B] and [E and F], while HSS8_CLOCK_EXT[3 - 4] can only be used for Channels [C and D] and [G and H].							
max_receive_bytes	1 to (2 048 - 2 CRC bytes) (default) or up to (32 kBytes - 2 CRC bytes), depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(..)).	Maximum number of bytes to receive before closing buffer.						
min_no_sync_pairs	0b0000 (0 pairs) - 0b1111 (16 pairs)	Minimum number of SYN1-SYN2 pairs sent between or before messages. The entire pair is always sent, regardless of the syn_length variable.						
crc_select	HSS8_BISYNC_CRC_MODE_16 HSS8_BISYNC_CRC_MODE_LRC	CRC selection. 1 : CRC16 (X16 + X15 + X2 + 1) : Initialise prcrc and ptcrc to all zeros or all ones. 2 : LRC (sum check) : For even LRC, initialise prcrc and ptcrc to zeros, for odd LRC initialise to ones.						
receive_bcs	TRUE FALSE	Enable Receive Block Check Sequence (BCS).						

Name	Options		Description
rx_transparent_mode	TRUE FALSE		Enable Receiver transparent mode. FALSE : Normal receiver mode with SYNC stripping and control character recognition. TRUE : Transparent receiver mode. SYNC's, DLE's and control characters are recognised only after the leading DLE character. The receiver calculates the CRC16 sequence even if it is programmed to LRC while in transparent mode. Initialize prcrc to the CRC16 preset value before setting rx_transparent_mode .
reverse_data	TRUE FALSE		Enable Reverse data.
disable_rx_while_tx	TRUE FALSE		Disable receiver while sending.
rx_parity tx_parity	HSS8_BISYNC_PARITY_ODD HSS8_BISYNC_PARITY_LOW HSS8_BISYNC_PARITY_EVEN HSS8_BISYNC_PARITY_HIGH		Receive and transmit parity. Parity is ignored unless crcc_select = LRC.
diag_mode	HSS8_DIAG_NORMAL	Normal operation. Use this for external loopback.	Set diagnostic mode. External loopback - RS-422/485 : Connect TxD+ to RxD+, TxD- to RxD-, CLK_OUT+ to CLK_IN+ and CLK_OUT- to CLK_IN-. External loopback - RS-232 : Connect TxD to RxD, CLK_OUT to CLK_IN and RTS to CTS and CD.
	HSS8_DIAG_LOOPBACK	Internal loopback : TxD and RxD are connected internally. The value on RxD, CTS and CD is ignored. The transmitter and receiver share the same clock source.	
	HSS8_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS8_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
crcc	0		CRC constant value.
prcrc ptcrc	0x0000 or 0xFFFF		Preset receiver / transmitter CRC16/LRC. These values should be preset to all ones or zeros, depending on the BCS used.
parec	0 - 65 535		Number of received parity errors.

Name	Options	Description
bsync	0bv0000000ssssssss	<p>BISYNC SYNC register. Contains the value of the SYNC character stripped from incoming data on receive once the receiver synchronizes to the data using the SYN1- SYN2 pair.</p> <p>v - If v = 1 and the receiver is not in hunt mode when a SYNC character is received, this character is discarded.</p> <p>ssssssss (8 bits) - SYNC character. When using 7-bit characters with parity, the parity bit should be included in the SYNC register value.</p>
bdle	0bv0000000ddddddd	<p>BISYNC DLE register. In transparent mode, the receiver discards any DLE character received.</p> <p>v - If v = 1 and the receiver is not in hunt mode when a DLE character is received, this character is discarded.</p> <p>ddddddd (8 bits) - DLE character. This character tells the receiver that the next character is text.</p>
cc[8]	0b0bh-----ccccccc - Valid entry. 0b1bh-----ccccccc - Entry not valid and is not used.	<p>Control characters 1 to 8.</p> <p>----- (5 bits) - Reserved. Initialise to zero.</p> <p>b - Block check sequence expected. A maskable interrupt is generated after the buffer is closed.</p> <p>b = 0 : The character is written into the receive buffer and the buffer is closed.</p> <p>b = 1 : The character is written into the receive buffer. The receiver waits for 1 LRC or 2 CRC bytes and then closes the buffer.</p> <p>h - Enables hunt mode when the current buffer is closed.</p> <p>h = 0 : The BISYNC controller maintains character synchronisation after closing the buffer.</p> <p>h = 1 : The BISYNC controller enters hunt mode after closing the buffer. When b = 1, the controller enters hunt mode after receiving LRC or CRC.</p> <p>ccccccc (8 bits) - Defines control characters to be compared to the incoming character. When using 7-bit characters with parity, include the parity bit in the character value.</p>

Name	Options	Description
rccm	0b11-----00000000 - Ignore these bits when comparing incoming character. 0b11-----11111111 - Enable comparing the incoming character to cc[n].	Receive control character mask. A one enables comparison and a zero masks it.
sync	0xssss (2 bytes)	SYNC character : Should be programmed with the sync pattern.
syn_length	HSS8_BISYNC_SYNL_8 HSS8_BISYNC_SYNL_16	HSS8_BISYNC_SYNL_8 : Should be chosen to implement mono-sync protocol. The receiver synchronizes on an 8-bit sync pattern in sync . HSS8_BISYNC_SYNL_16 : The receiver synchronizes on a 16-bit sync pattern stored in sync .
send_idles_or_flags	HSS8_BISYNC_SEND_IDLEES HSS8_BISYNC_SEND_FLAGS_SYNCES	Send either idles or flags/syncs between frames as defined by the protocol. The flag character is equal to sync.

6.3.4 SMC UART Mode

This protocol may only be used with the four SMC ports : Ports I - L.

6.3.4.1 SMC UART Protocol Information Structure

The following structure is defined in the file *hss8Controllfc.h* and is given here in abbreviated format (i.e. reserved and obsolete members are not shown). Always use the structure as defined in *hss8Controllfc.h*.

```
struct hss8SmcUartInfoStruct
{
    hss8UINT32 max_receive_bytes;
    hss8UINT32 max_idl;
    hss8UINT32 data_bits;
    hss8UINT32 stop_bits;
    hss8UINT32 parity_enable;
    hss8UINT32 parity_mode;
    hss8UINT32 diag_mode;
    hss8UINT32 baud_rate;
};
typedef struct hss8SmcUartInfoStruct hss8SmcUartInfo;
```

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 29 of 32

6.3.4.2 SMC UART Protocol Information Structure Members

Name	Options		Description
baud_rate	1 200 - 115.2 kbit/s (RS-232/RS-422/485) Any values permissible. The equation to calculate the actual baud rate for the SMC UART is as follows : $\text{Actual baud rate} = 100 \text{ MHz} / 16 / \text{ROUND}(100 \text{ MHz} / 16 / \text{Desired baud rate})$ Where ROUND() implies that the result is rounded to the nearest integer.		Used to specify a single baud rate for both transmitter and receiver. Units in bit/s.
stop_bits	HSS8_UART_STOP_BITS_ONE HSS8_UART_STOP_BITS_TWO		Number of full stop bits.
data_bits	HSS8_UART_DATA_BITS_5 HSS8_UART_DATA_BITS_6 HSS8_UART_DATA_BITS_7 HSS8_UART_DATA_BITS_8 HSS8_UART_DATA_BITS_9 HSS8_UART_DATA_BITS_10 HSS8_UART_DATA_BITS_11 HSS8_UART_DATA_BITS_12 HSS8_UART_DATA_BITS_13 HSS8_UART_DATA_BITS_14		Number of data bits. Note : Only Channels I - H (i.e. the SMC channels) support nine or more data bits.
parity_enable	HSS8_UART_PARITY_NO_PARITY HSS8_UART_PARITY_ENABLE		Enable or disable parity checking.
parity_mode	HSS8_UART_SMC_PARITY_ODD HSS8_UART_SMC_PARITY_EVEN		Receive and transmit parity. Parity will only be checked if parity is enabled.
diag_mode	HSS8_DIAG_NORMAL	Normal operation. Use this for external loopback .	Set diagnostic mode. External loopback - RS-422/485 : Connect TxD+ to RxD+ and TxD- to RxD-. External loopback - RS-232 : Connect TxD to RxD.
	HSS8_DIAG_LOOPBACK	Internal loopback : TxD and RxD are connected internally. The value on RxD is ignored.	
	HSS8_DIAG_ECHO	The transmitter automatically resends received data bit-by-bit.	
	HSS8_DIAG_LOOPBACK_ECHO	Loopback and echo operation occur simultaneously.	
max_receive_bytes	1 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(..)).		Maximum number of bytes that may be copied into a buffer.
max_idl	0 to 2 048 (default) or up to 32 kBytes, depending on how many bytes have been allocated to the RX and TX buffers (See function hss8Create_device(..)).		Maximum idle characters. When a character is received, the receiver begins counting idle characters. If max_idl idle characters are received before the next data character, an idle timeout occurs and the buffer is closed. Thus, max_idl offers a way to demarcate frames. To disable the feature, clear max_idl. The bit length of an idle character is calculated as follows : $1 + \text{data length (5-14)} + 1 \text{ (if parity is used)} + \text{number of stop bits (1 - 2)}$ For 8 data bits, no parity, and 1 stop bit, the character length is 10 bits.

7. **Getting Started**

After installing the HSS8 Linux Software Driver according to Paragraph 4, test it by following the test procedure given in hss8Test.txt.

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 31 of 32

8. **Contact Details**

8.1 Contact Person

Direct all correspondence and / or support queries to the Project Manager at C²I² Systems.

8.2 Physical Address

C²I² Systems
Unit 3, Rosmead Place, Rosmead Centre
67 Rosmead Avenue
Kenilworth
Cape Town
7708
South Africa

8.3 Postal Address

C²I² Systems
P.O. Box 171
Rondebosch
7701
South Africa

8.4 Voice and Electronic Contacts

Tel : (+27) (0)21 683 5490
Fax : (+27) (0)21 683 5435
Email : info@ccii.co.za
Email : support@ccii.co.za
URL : <http://www.ccii.co.za/>

8.5 Product Support

Support on C²I² Systems products is available telephonically between Monday and Friday from 09:00 to 17:00 CAT. Central African Time (CAT = GMT + 2).

CCII/HSS8/6-MAN/003	2009-08-20	Issue 1.2
CH8MAN03.WPD		Page 32 of 32